



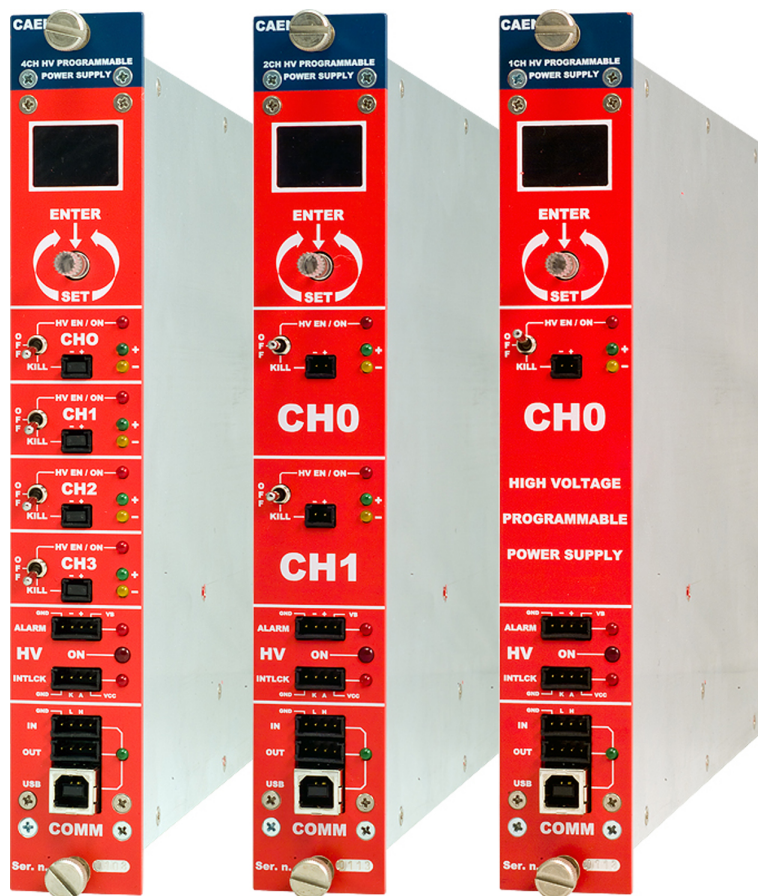

Register your device

 
Register your device to your **MyCAEN+** account and get access to our customer services, such as notification for new firmware or software upgrade, tracking service procedures or open a ticket for assistance. **MyCAEN+** accounts have a dedicated support service for their registered products. A set of basic information can be shared with the operator, speeding up the troubleshooting process and improving the efficiency of the support interactions.

MyCAEN+ dashboard is designed to offer you a direct access to all our after sales services. Registration is totally free, to create an account go to <https://www.caen.it/become-mycaenplus-user> and fill the registration form with your data.

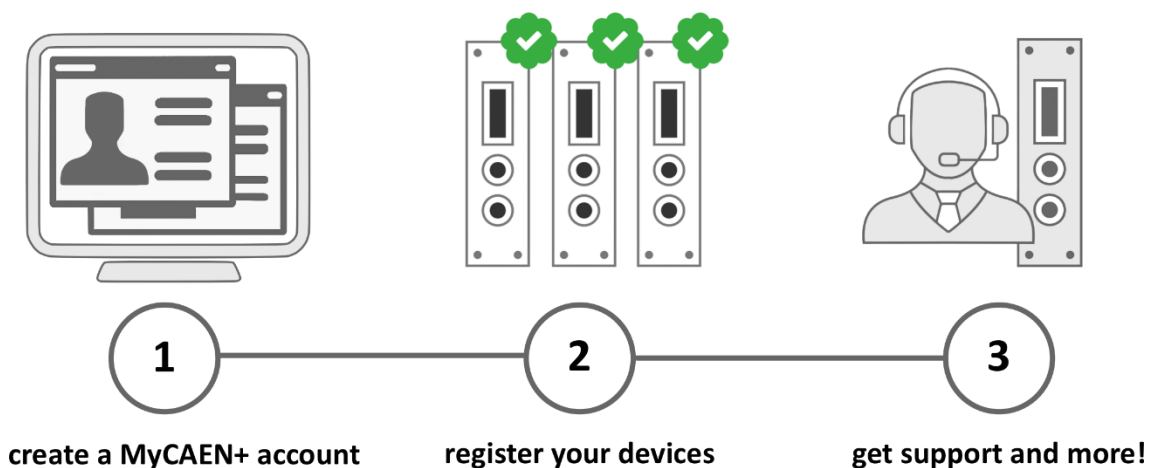

<https://www.caen.it/become-mycaenplus-user/>

Purpose of this User Manual



This document is the N1471H HV Power Supplies User's Manual; it contains information about the installation, the configuration and the use of the device.

Change Document Record

Date	Revision	Changes
10 July 2017	12	Updated 2.5.1, 3.1, 3.4.1
31 May 2019	13	Updated 2.7
4 October 2019	14	Updated to FW release 2.06 (zero current)
12 February 2021	15	Updated Table 2.3
29 March 2021	16	Updated USB communication, Technical specs. Table, Remote Control
16 March 2023	17	Channel settings

Manufacturer Contacts



CAEN S.p.A.

Via Vetraria, 11 55049 Viareggio (LU) - ITALY
Tel. +39.0584.388.398 Fax +39.0584.388.959
www.caen.it | info@caen.it

© CAEN SpA – 2023

Limitation of Responsibility

If the warnings contained in this manual are not followed, CAEN will not be responsible for damage caused by improper use of the device. The manufacturer declines all responsibility for damage resulting from failure to comply with the instructions for use of the product. The equipment must be used as described in the user manual, with particular regard to the intended use, using only accessories as specified by the manufacturer. No modification or repair can be performed.

Disclaimer

No part of this manual may be reproduced in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of CAEN spa. The information contained herein has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. CAEN spa reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caen.it.

Made in Italy

We remark that all our boards have been designed and assembled in Italy. In a challenging environment where a competitive edge is often obtained at the cost of lower wages and declining working conditions, we proudly acknowledge that all those who participated in the production and distribution process of our devices were reasonably paid and worked in a safe environment (this is true for the boards marked "MADE IN ITALY", while we cannot guarantee for third-party manufactures).



Index

	Purpose of this User Manual	3
	Change Document Record	3
	Manufacturer Contacts.....	3
	Limitation of Responsibility	3
	Disclaimer	3
	Made in Italy	3
1	Safety Notices	7
2	General description	9
	Overview.....	9
3	Technical specifications.....	10
	Packaging.....	10
	Power requirements.....	10
	Front and back panel	12
	Front panel connections.....	14
	Local control section	14
	Channel control section	14
	HV Status control section.....	15
	Alarm signal	15
	Interlock signal.....	15
	Remote communication control section.....	16
	Rear panel connections	17
	HV Channel Output	17
	Imon Zoom.....	17
	Technical specifications table	18
4	Operating modes.....	19
	Safety requirements and Initial inspection.....	19
	Programmable parameters.....	19
	Boards parameters.....	19
	Channel settings.....	20
	Local Control	21
	HV connection.....	21
	Module settings	22
	Channel settings.....	23
	Group Settings	26
	Smileys.....	28
	Current monitor offset calibration	28
	Zero Current Adjustment firmware release 2.06 and newer.....	28
	Remote Control	29
	Serial Links	29
	USB communication	29
	RS232 communication	29
	RS485 communication	30
	Ethernet communication	30
	Communication Control	31
	Remote Control: Main Menu.....	31
	Remote Control: General Menu	31
	Remote Control: Channels Menu	32
	Remote Control: firmware upgrade.....	33
	Remote Control: format EEPROM	33
	Remote Control: Current offset calibration (Firmware rel. up to 2.05 only)	34
	USB - RS485 Communication Protocol	35
	Command Format	35
	Format of response string.....	35
	MONITOR commands related to the Channels	35
	Meaning of STATUS bits (value read in decimal Format).....	36
	MONITOR commands related to the module	36
	Meaning of Board Alarm bits.....	37
	SET commands related to the Channels.....	37

	SET commands related to the module	37
5	Internal Settings	38
	Polarity selection	38
	Internal switches.....	40
	Local Bus termination	40
	RS485 – RS232 conversion	40
	Grounding specifications	40
	Safety Earth connection	41
6	Instructions for Cleaning	43
	Cleaning the Touchscreen	43
	Cleaning the air vents	43
	General cleaning safety precautions	43
7	Device decommissioning	44
8	Disposal.....	45
9	Technical Support.....	46

List of Figures

Fig. 2.1: Mod. N1471H Reversible 5.5 kV/20 μ A Power Supplies	9
Fig. 3.1: Backplane NIM connector.....	11
Fig. 3.2: Mod. N1471H series front panel.....	12
Fig. 3.3: Mod. N1471H series back panel.....	13
Fig. 3.4: Local control panel.....	14
Fig. 3.5: Channel control panel and Kill scheme	14
Fig. 3.6: N1471H HV Status control panel.....	15
Fig. 3.7: N1471H ALARM electrical scheme.....	15
Fig. 3.8: N1471H ALARM TTL configured	15
Fig. 3.9: N1471H INTERLOCK electrical scheme.....	15
Fig. 3.10: Remote communication control and RS485 I/O – RS232 IN electrical scheme.....	16
Fig. 3.11: HV Channel panel and test point electrical scheme.....	17
Fig. 4.1: Welcome screen	21
Fig. 4.2: Channel OFF status screen	21
Fig. 4.3: Channel ON status screen	21
Fig. 4.4: Channel KILL status screen	21
Fig. 4.5: Mode settings status screen	22
Fig. 4.6: Mode settings access screen.....	22
Fig. 4.7: Mode settings edit screen.....	22
Fig. 4.8: Channel settings edit screen	23
Fig. 4.9: Channel VSET select screen.....	23
Fig. 4.10: Channel VSET access screen.....	23
Fig. 4.11: Channel VSET digit selection screen.....	23
Fig. 4.12: Channel VSET digit access screen.....	24
Fig. 4.13: Channel VSET digit adjust screen	24
Fig. 4.14: Channel VSET digit confirm screen.....	24
Fig. 4.15: Channel VSET confirm screen.....	24
Fig. 4.16: Channel VSET de-select screen	24
Fig. 4.17: Channel KILL screen	25
Fig. 4.18: Channel EXIT screen	25
Fig. 4.19: Group selection	26
Fig. 4.20: Group active	26
Fig. 4.21: Group VSET access screen.....	26
Fig. 4.22: Group VSET digit selection screen.....	26
Fig. 4.23: Group Channel VSET digit access screen.....	27
Fig. 4.24: Group VSET digit adjust screen	27
Fig. 4.25: Group VSET digit confirm screen.....	27
Fig. 4.26: Channel VSET de-select screen	27
Fig. 4.27: Group EXIT screen	28
Fig. 4.28: USB communication diagram.....	29
Fig. 4.29: RS232 communication diagram	29
Fig. 4.30: RS485 communication diagram	30
Fig. 4.31: Ethernet communication diagram	30

Fig. 4.32: RS232 port cable adapter	31
Fig. 4.33: Main Menu.....	31
Fig. 4.34: Board Status Menu	32
Fig. 4.35: Channels Menu	32
Fig. 4.36: PC keyboard	32
Fig. 4.37: Channels group setting	33
Fig. 4.38: Firmware Upgrade Menu/1	33
Fig. 4.39: Firmware Upgrade Menu/2	33
Fig. 4.40: Format EEPROM Menu	34
Fig. 4.41: Current offset calibration warning	34
Fig. 4.42: Current offset calibration VSET selection.....	34
Fig. 4.43: Current offset calibration confirmation	34
Fig. 5.1: Side cover removal instructions	38
Fig. 5.2: Polarity selection instructions	39
Fig. 5.3: Dip switch position	40
Fig. 5.4: C21 jumper location	41
Fig. 5.5: Earth configuration connection examples	42

 
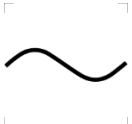
List of Tables

Table 2.1: Available items.....	9
Table 3.1: Power requirements	10
Table 3.2: Interlock operation	16
Table 3.3: Mod. N1471H Channel technical specifications.....	18
Table 4.1: Smileys list	28

1 Safety Notices

N.B. Read carefully the “SAFETY, STORAGE AND SETUP INFORMATION PRODUCT SUPPORT SERVICE AND REPAIR” document provided with the product before starting any operation.

The following HAZARD SYMBOLS may be reported on the unit:

	Caution, refer to product manual
	Caution, risk of electrical shock
	Protective conductor terminal
	Earth (Ground) Terminal
	Alternating Current
	Three-Phase Alternating Current

The following symbol may be reported in the present manual:

	General warning statement
---	---------------------------

The symbol could be followed by the following terms:

- **DANGER:** indicates a hazardous situation which, if not avoided, will result in serious injury or death.
- **WARNING:** indicates a hazardous situation which, if not avoided, could result in death or serious injury.
- **CAUTION:** indicates a situation or condition that, if not avoided, could cause physical injury or damage the product and / or its environment.

CAUTION: To avoid potential hazards



**USE THE PRODUCT ONLY AS SPECIFIED.
ONLY QUALIFIED PERSONNEL SHOULD PERFORM SERVICE PROCEDURES**

CAUTION: Avoid Electric Overload



**TO AVOID ELECTRIC SHOCK OR FIRE HAZARD, DO NOT POWER A LOAD
OUTSIDE OF ITS SPECIFIED RANGE**

CAUTION: Avoid Electric Shock



**TO AVOID INJURY OR LOSS OF LIFE, DO NOT CONNECT OR DISCONNECT
CABLES WHILE THEY ARE CONNECTED TO A VOLTAGE SOURCE**

CAUTION: Do Not Operate without Covers



**TO AVOID ELECTRIC SHOCK OR FIRE HAZARD, DO NOT OPERATE THIS
PRODUCT WITH COVERS OR PANELS REMOVED**

CAUTION: Do Not Operate in Wet/Damp Conditions



**TO AVOID ELECTRIC SHOCK, DO NOT OPERATE THIS PRODUCT IN WET
OR DAMP CONDITIONS**

CAUTION: Do Not Operate in an Explosive Atmosphere



**TO AVOID INJURY OR FIRE HAZARD, DO NOT OPERATE THIS PRODUCT
IN AN EXPLOSIVE ATMOSPHERE**



**THIS DEVICE SHOULD BE INSTALLED AND USED BY SKILLED TECHNICIAN
ONLY OR UNDER HIS SUPERVISION**



**DO NOT OPERATE WITH SUSPECTED FAILURES.
IF YOU SUSPECT THIS PRODUCT TO BE DAMAGED, PLEASE CONTACT
THE TECHNICAL SUPPORT**

2 General description

Overview

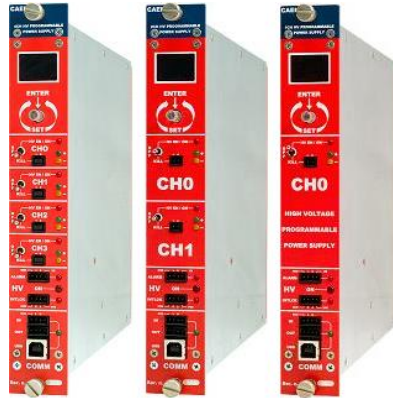


Fig. 2.1: Mod. N1471H Reversible 5.5 kV/20 μ A Power Supplies

The Mod. N1471H provides 4 independent High Voltage channels in a single width NIM mechanics. Two and one channel versions (N1471HA and N1471HB) are also available.

Each channel can provide a ± 5.5 kV / 20 μ A max output.

Channels have common floating return (common return insulated from the crate ground); HV outputs are delivered through SHV connectors.

The HV output RAMP-UP and RAMP-DOWN rates may be selected independently for each channel in the range 1÷500 V/s in 1 V/s steps.

Safety features include:

- OVERVOLTAGE and UNDERVOLTAGE warning when the output voltage differs from the programmed value by more than 2% of set value (minimum 10V).
- Programmable VMAX protection limit
- OVERCURRENT detection: if a channel tries to draw a current larger than its programmed limit, it enters TRIP status, keeping the maximum allowed value for a programmable time (TRIP), before being switched off
- Channels can be enabled or disabled individually through the Interlock logic.

Module control can take place either locally, assisted by a Graphic color display or remotely, via USB, RS232 or RS485, the latter allowing to build a N1471Hs' daisy chain network (up to 32 modules).

For remote operation, CAEN also provides GECO2020, a graphical application that allows to manage the N14xx HV Power Supplies (as well as all other CAEN Power Supplies).

Moreover, these units can be managed via **CAEN HV Wrapper**, a set of ANSI C functions bundled in a library, providing the software developer an unified software interface for the control of CAEN Power Supplies. This is a low level application in which the writing of the Control SW is assigned to the user. CAEN HV Wrapper is logically located between an higher level application, such as **GECO2020**, and the lower layer software libraries. It contains a generic software interface independent by the Power Supply models and by the communication path used to exchange data with them. For more info please visit: www.caen.it (products>firmware/software section).

The Mod. A1480 is an optional DC Input Power Equalizer which allows to use a different input power distribution on the N147x modules.

Table 2.1: Available items

Code	Item	Description
WN1471HX05AC	N1471H	4 Channel NIM Programmable High Current Res. HV PS (± 5.5 kV, 20 μ A, 1 nA res.)
WN1471HA05AC	N1471HA	2 Channel NIM Programmable High Current Res. HV PS (± 5.5 kV, 20 μ A, 1 nA res.)
WN1471HB05AC	N1471HB	1 Channel NIM Programmable High Current Res. HV PS (± 5.5 kV, 20 μ A, 1 nA res.)
WA1480XAAAAA	A1480	DC Power Input Equalizer for N147X Family

3 Technical specifications

Packaging

The Mod. N1471H boards are housed in single width NIM modules.

Power requirements

Table 3.1: Power requirements

Board type	N1471H					
Channel configuration	without A1480			with A1480		
	N° ch ON	Current ($\pm 12V$)	Current ($\pm 6V$)	n° ch ON	Current ($\pm 12V$)	Current ($\pm 6V$)
3kV/20 μ A	4 CH	720 mA	< 10mA	4 CH	570 mA	700 mA
5.5kV/2 μ A	4 CH	850 mA	< 10mA	4 CH	630 mA	880 mA
5.5kV/20 μ A	4 CH	870 mA	< 10mA	4 CH	630 mA	860 mA
Board type	N1471HA					
Channel configuration	without A1480			with A1480		
	N° ch ON	Current ($\pm 12V$)	Current ($\pm 6V$)	n° ch ON	Current ($\pm 12V$)	Current ($\pm 6V$)
3kV/20 μ A	2 CH	560 mA	< 10mA	2 CH	460 mA	510 mA
5.5kV/2 μ A	2 CH	620 mA	< 10mA	2 CH	500 mA	610 mA
5.5kV/20 μ A	2 CH	620 mA	< 10mA	2 CH	500 mA	610 mA
Board type	N1471HB					
Channel configuration	without A1480			with A1480		
	N° ch ON	Current ($\pm 12V$)	Current ($\pm 6V$)	n° ch ON	Current ($\pm 12V$)	Current ($\pm 6V$)
3kV/20 μ A	1 CH	470 mA	< 10mA	1 CH	370 mA	400 mA
5.5kV/2 μ A	1 CH	470 mA	< 10mA	1 CH	340 mA	300 mA
5.5kV/20 μ A	1 CH	500 mA	< 10mA	1 CH	380 mA	400 mA

WARNING: if the A1480 is not installed, $\pm 6V$ power supplies are required only by older versions of the N1471H; such boards can be recognized by the presence of power pins 10 and 11 on the backplane NIM connector. If the A1480 is not installed, new versions operate only with $\pm 12V$ power supplies.

PIN	FUNCTION
1	+3 Volts
2	-3 Volts
3	SPARE
4	RESERVED
5	COAXIAL
6	COAXIAL
7	COAXIAL
8	+200 Volts D.C.
9	SPARE
10	+6 Volts
11	-6 Volts
12	RESERVED
13	CARRY NO. 1
14	SPARE
15	RESERVED
16	+12 Volts
17	-12 Volts
18	SPARE
19	RESERVED
20	SPARE
21	SPARE
22	RESERVED
23	RESERVED
24	RESERVED
25	RESERVED
26	SPARE
27	SPARE
28	+24 Volts
29	-24 Volts
30	SPARE
31	CARRY NO. 2
32	SPARE
33	117 V.A.C. (HOT)
34	POWER RET. GND
35	RESET
36	GATE
37	SPARE
38	COAXIAL
39	COAXIAL
40	COAXIAL
41	117 V.A.C. (NEUT.)
42	HIGH QUAL. GND
G	GROUND GUIDE PIN

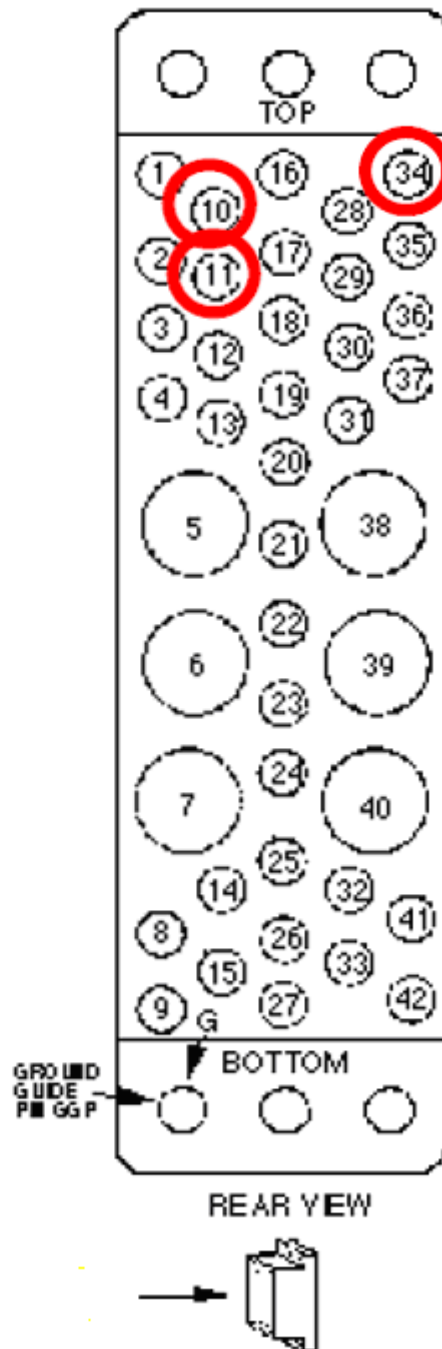


Fig. 3.1: Backplane NIM connector

Front and back panel

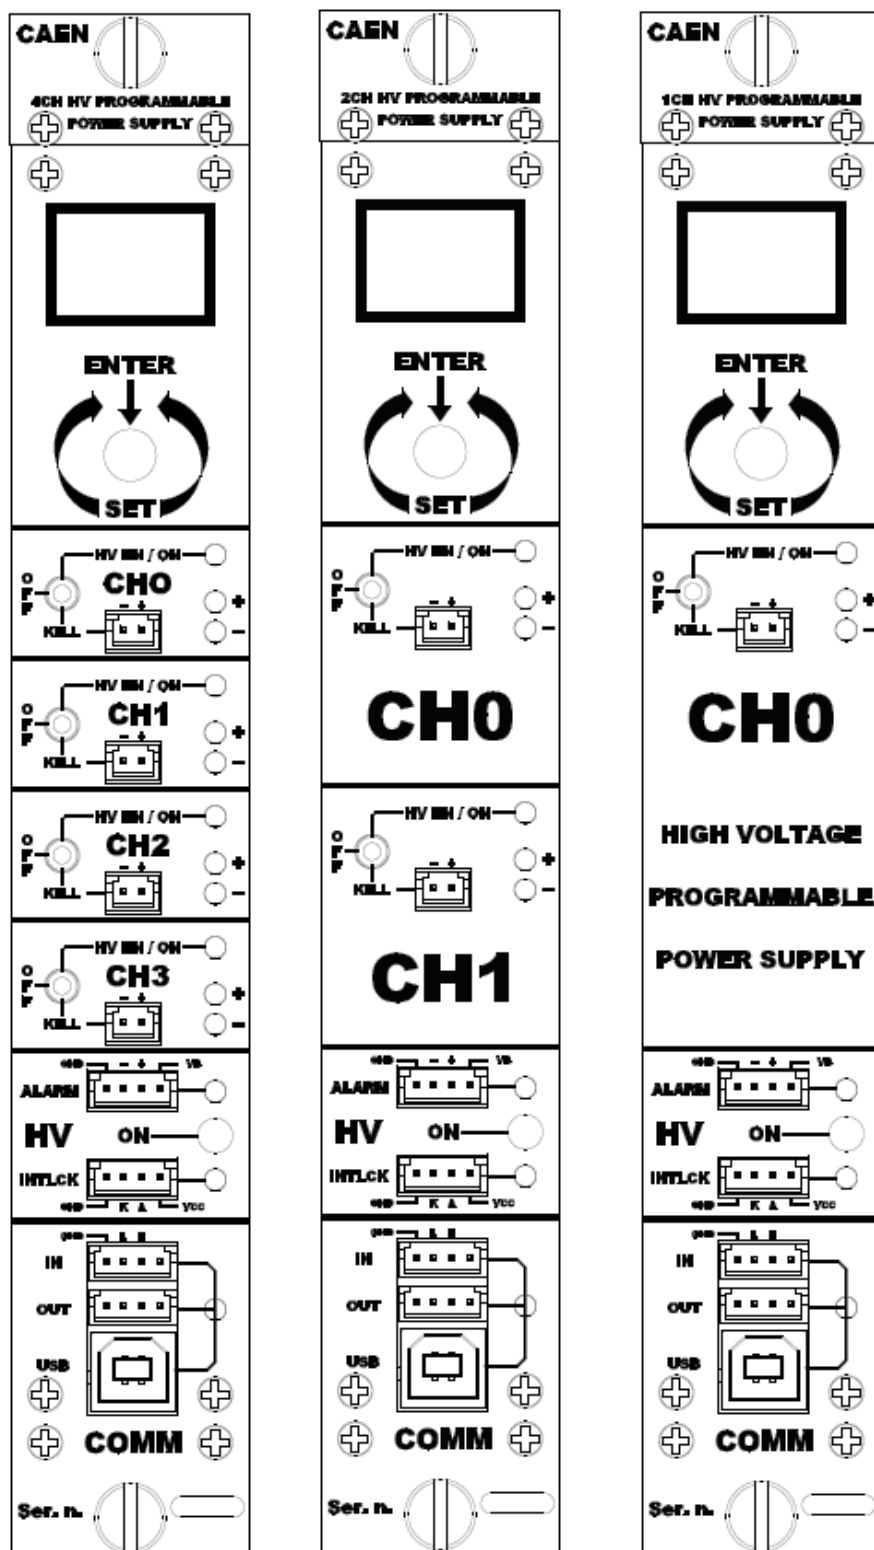


Fig. 3.2: Mod. N1471H series front panel

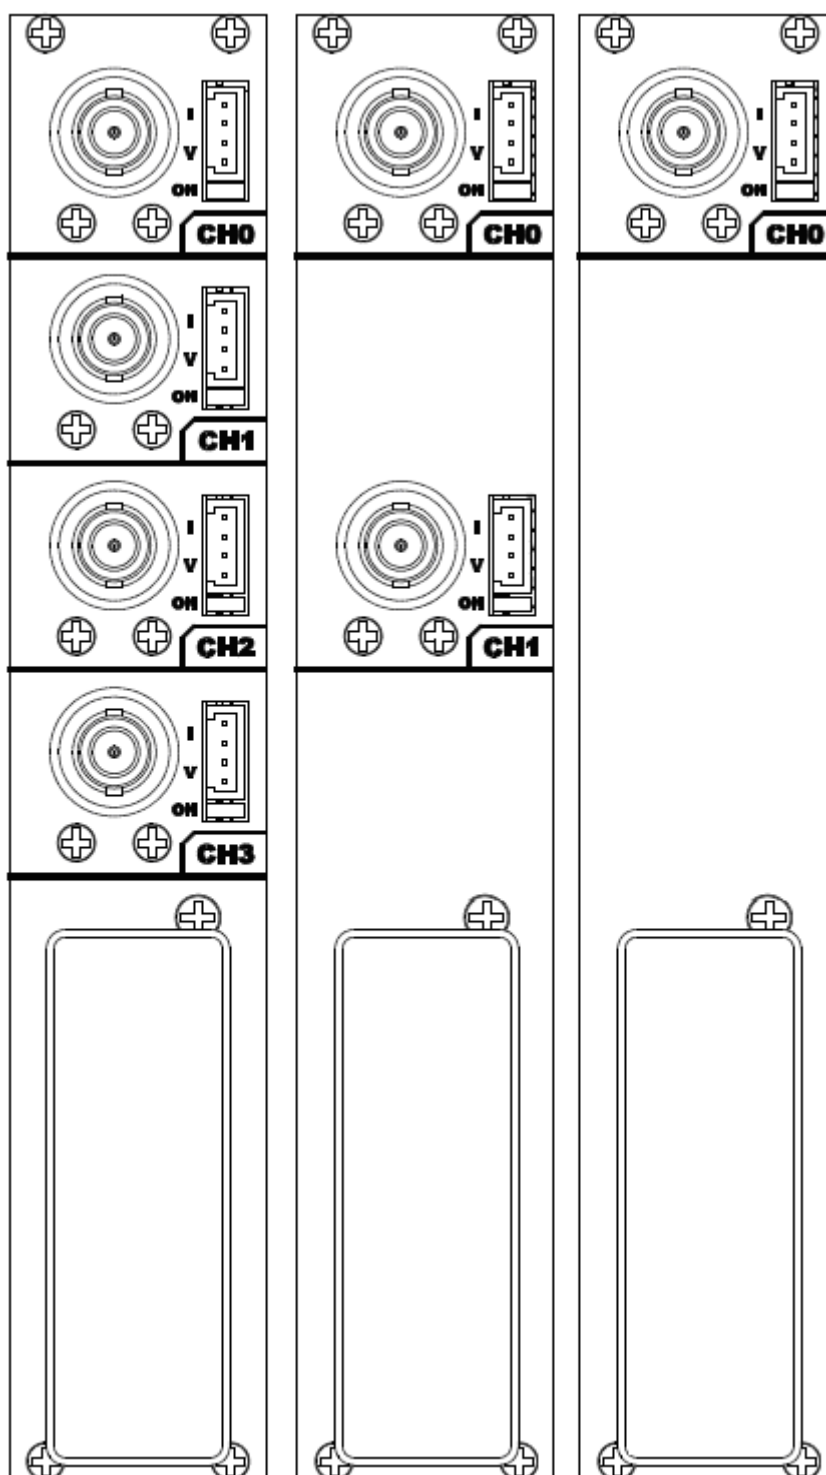


Fig. 3.3: Mod. N1471H series back panel

Front panel connections

Local control section

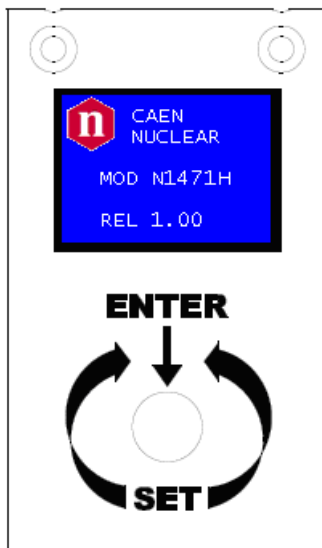


Fig. 3.4: Local control panel

NAME:	TYPE:	FUNCTION:
MONITOR	1" OLED DISPLAY (96x64)	Local settings monitoring
TUNE	ROTARY SWITCH	Parameter and Mode setting

Channel control section

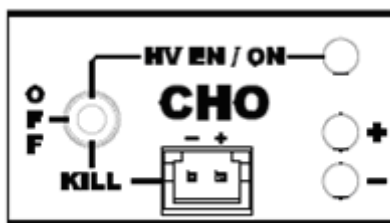


Fig. 3.5: Channel control panel and Kill scheme

NAME:	TYPE:	FUNCTION:
HV_EN/OFF/KILL	3 POS. SWITCH	Channel Enable and turning OFF/KILL ¹
ON	RED LED	HV On enabled
REMOTE KILL	AMP 280370-2	The channel is KILLED either as the 1-2 contacts are open or as a +4÷6Vdc voltage is fed to pin 1 (see note)
+	GREEN LED	Positive polarity
-	YELLOW LED	Negative polarity

¹ OFF: Channel turned off according to RAMP DOWN setting; KILL: Channel turned off at fastest available rate

HV Status control section

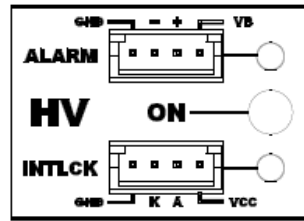


Fig. 3.6: N1471H HV Status control panel

NAME:	TYPE:	SIGNAL:	FUNCTION:
ON	RED LED		<i>HV On enabled (at least one channel ON)</i>
ALARM	RED LED/ AMP 280371-2.	Out	<i>Alarm status signaled (active LOW)</i>
INTERLOCK	RED LED/ AMP 280371-2	In	<i>Interlock signal</i>

Alarm signal

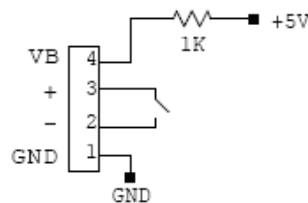


Fig. 3.7: N1471H ALARM electrical scheme

As an Alarm condition is detected pins 2 and 3 (- and +) are closed; the contact can be used to switch an external device supplied by an external source, otherwise the VB and GND references can be used to provide a TTL compatible level on pin 2 and 3.

In the first case (externally supplied device) the maximum allowed ratings are:

- Maximum voltage between + and -: 12V
- Maximum sink current across + and -: 100mA

In the latter case, in order to produce a TTL compatible Alarm Out, pin 3 (+) must be connected with pin 4 (VB) and pin 1 (GND) with pin 2 (-); see the diagram below:

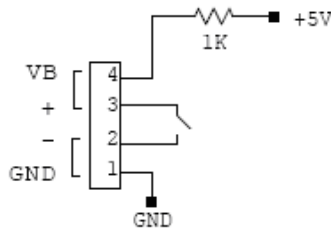


Fig. 3.8: N1471H ALARM TTL configured

Interlock signal

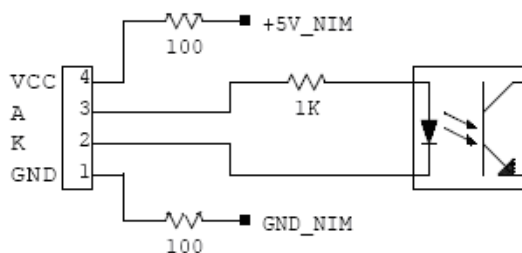


Fig. 3.9: N1471H INTERLOCK electrical scheme

A schematic diagram of the Interlock input is shown in the figure above, where the diode is part of optocoupler stage.

Interlock means that channels are hardware disabled. The interlock operation is explained by the following table:

Table 3.2: Interlock operation

CONFIGURATION ↓	INTERLOCK MODE →	OPEN	CLOSE
leave contact open		INTERLOCK	ENABLED
voltage level (0÷1V, ~5mA current) between pin 2 and pin 3		INTERLOCK	ENABLED
short circuit pin 1 with pin 2, and pin 3 with pin 4		ENABLED	INTERLOCK
voltage level (4÷6V, ~5mA current) between pin 2 and pin 3		ENABLED	INTERLOCK

The front panel Interlock LED is ON when the INTERLOCK is enabled; as INTERLOCK is enabled, channels are turned off at the fastest available rate, regardless the RAMP DOWN setting.

Remote communication control section

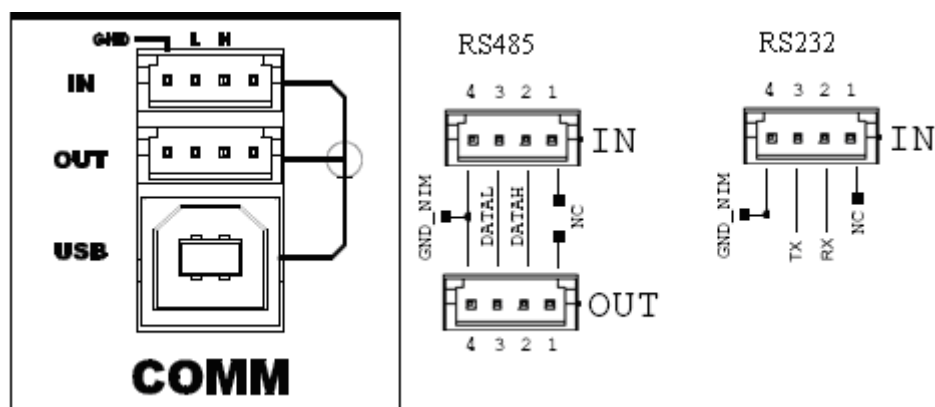


Fig. 3.10: Remote communication control and RS485 I/O – RS232 IN electrical scheme

NAME:	TYPE:	FUNCTION:
IN	AMP 280371-2	RS485 Input ² ; adaptable to RS232 standard
OUT	AMP 280371-2	RS485 Output
USB	B TYPE USB	USB2.0 compliant realized via USB ↔ RS232 FT232BM converter

² RS 485 Serial Port Interface allows to control up to 32 modules connected by a twisted pair cable; the first and last modules must be terminated, see § 0.

Rear panel connections

HV Channel Output

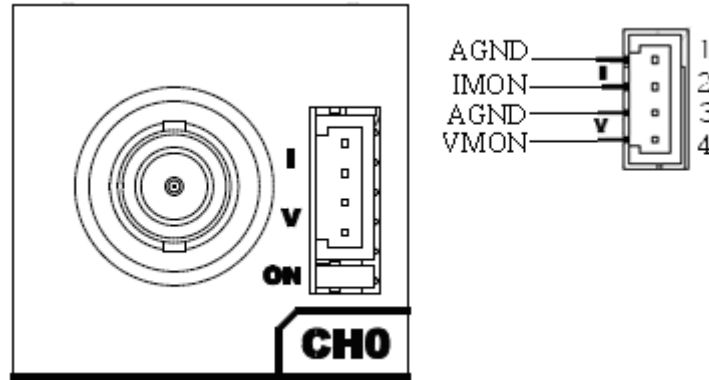


Fig. 3.11: HV Channel panel and test point electrical scheme

NAME:	TYPE:	FUNCTION:
MON	AMP 280371-2	Vout/Iout Test point
OUT	SHV	HV Channel Output

The test points allow to monitor the Channel Output Voltage and Current according to the following conversion:

VMON: Voltage level (1V = 1.5 kV $\pm$ 1% readout; same polarity as channel)

IMON high range: Voltage level (1V = 4.55 μ A $\pm$ 3% readout; positive, 0÷5 V range)

IMON low range: Voltage level (1V = 455 nA $\pm$ 3% readout; positive, 0÷5 V range)



WARNING! These connectors produce extremely hazardous high voltages at a potentially lethal current level; never connect or disconnect the HV OUT connector with the crate power ON/OFF switch ON; always switch crate power OFF and wait at least 30s before connecting or disconnecting HV cables.

Imon Zoom

Imon Zoom allows to monitor the channel current with an increased resolution in the 0 ÷ 2 μ A range; by selecting Imon Range = LOW, the output current is monitored with 50 pA resolution (instead of 1 nA), in the 0 ÷ 2 μ A range. It is important to notice that, if Imon Range = LOW is selected, and the channel draws a current larger than 2 μ A, then Overcurrent is signalled.

Technical specifications table

Table 3.3: Mod. N1471H Channel technical specifications

Output channels:			Positive or Negative Polarity (requires internal setting)		
Output ranges:			5.5kV / 20μA		
Max. Ch. Output Power:			0.11W		
Vset / Vmon Resolution:			100 mV		
Iset / Imon Resolution ³ :			If IMON RANGE = High is selected resolution is 1 nA If IMON RANGE = Low is selected resolution is 50 pA		
Vmax:			0 ÷ 5600 V Absolute maximum HV level that the channel is allowed to reach, independently from the preset value Vset. Output voltage cannot exceed the preset value Vmax. The accuracy is 1 % ± 5 V		
Vmax resolution:			± 1 V		
Alarm output:			Open collector, 100 mA maximum sink current		
Interlock input:			LOW: <1V; current~5mA; HIGH: 4÷6 V		
Ramp Up/Down:			1÷500 Volt/s, 1 Volt/s step		
Trip:			Max. time an "overcurrent" is allowed to last (seconds). A channel in "overcurrent" works as a current generator; output voltage varies in order to keep the output current lower than the programmed value. "Overcurrent" lasting more than set value (1 to 9999) causes the channel to "trip". Output voltage will drop to zero either at the Ramp-down rate or at the fastest available rate, depending on Power Down setting; in both cases the channel is put in the OFF state. If trip= INFINITE, "overcurrent" lasts indefinitely. TRIP range: 0 ÷ 999.9 s; 1000 s = Infinite. Step = 0.1 s		
“Zero” current:			Zero Current Detect channel parameter allows to sample the present IMon value; this value (IMonZero) can be then subtracted via the Zero Current Adjust parameter ENABLE, from the monitored current (IMon), to compensate the current offset; if ZCAdjust = Enabled, then the IMon value is compensated. After the IMonZero value is sampled, Zero Current Detect, returns to Off. Allowed IMonZero values are from 0 to full scale. If Zero Current Adjust is DISABLED, the IMonZero compensation is neglected.		
Accuracy: ⁴		Vmon vs. Vout	±0.02% of read value ±2V		
		Vset vs. Vmon	±0.02% of read value ±2V		
		Imon vs. Iout	If IMON RANGE = High: ±2% of read value ±2nA If IMON RANGE = Low:±2% of read value ±200pA		
		Iset vs. Imon	If IMON RANGE = High: ±2% of read value ±3nA If IMON RANGE = Low:±2% of read value ±300pA		
Voltage Ripple: ⁵	10 ÷ 1000 Hz	typical	<12 mVpp		
		maximum	<20 mVpp		
	1 ÷ 20000 kHz	typical	<2 mVpp		
		maximum	<5 mVpp		
Humidity range:			0 ÷ 80%		
Operating temperature:			0 ÷ 45°C		
Storage temperature:			-10 ÷ 70°C		
Vout / Temperature coefficient:			max. 50ppm / °C		
Imon / Temperature coefficient:			max 100ppm/C°; max 300ppm/C° with Imon zoom		
Long term stability Vout vs. Vset:			± 0.02% (after one week @ constant temperature)		

³ The module is calibrated by introducing a positive offset on the current monitor, see details in § 0

⁴ From 10% to 90% of Full Scale Range

⁵ Measured with: 1m cable length; 2nF capacitance

4 Operating modes



CAUTION: N1471H MUST BE USED ONLY IN CRATES WITH FORCED COOLING AIR FLOW!

Module control can take place either locally, or remotely, via USB or RS485.

Safety requirements and Initial inspection

N.B. read carefully the “Precautions for Handling, Storage and Installation” document provided with the product before starting any operation!

The following HAZARD SYMBOLS are reported on the unit:



CAUTION: indicates the need to consult the “Precautions for Handling, Storage and Installation” document provided with the product. **A potential risk exists if the operating instructions are not followed**



HIGH VOLTAGE: indicates the presence of electric shock hazards. Enclosures marked with these symbols should only be opened by CAEN authorized personnel.

To avoid risk of injury from electric shock, do not open this enclosure

To avoid potential hazards, use the product only as specified. Only qualified personnel should perform service procedures.

Avoid Electric Overload. To avoid electric shock or fire hazard, do not power a load outside of its specified range.

Avoid Electric Shock. To avoid injury or loss of life, do not connect or disconnect cables while they are connected to a voltage source.

Do Not Operate without Covers. To avoid electric shock or fire hazard, do not operate this product with covers or panels removed.

Do Not Operate in Wet/Damp Conditions. To avoid electric shock, do not operate this product in wet or damp conditions.

Do Not Operate in an Explosive Atmosphere. To avoid injury or fire hazard, do not operate this product in an explosive atmosphere.

Do Not Operate with Suspected Failures. If you suspect this product to be damaged, have it inspected by qualified service personnel.

Programmable parameters

Boards parameters

General board parameters (CONTROL can be operated both in LOCAL and REMOTE mode; other monitor and settings are allowed in LOCAL mode only) include:

Parameter:	Function:
Power (Monitor)	Module power supply status
Termination (Monitor)	Local Bus termination status (ON/OFF)
HV Clock (Monitor)	Sync clock frequency (200±10 kHz correct value)
Local Bus Baud Rate (Monitor/Set)	9600, 19200, 38400, 57600, 115200 Baud

Display:



Local Bus Address (Monitor/Set)	Local Bus address for remote communication (0÷31)
USB Baud Rate (Monitor/Set)	9600, 19200, 38400, 57600, 115200 Baud
INTERLOCK (Monitor/Set)	CLOSED / OPEN OPERATION
CONTROL (Monitor/Set)	REMOTE: the module is controlled remotely; local monitor is allowed; <i>LOCAL/REMOTE</i> switch is enabled LOCAL: the module is controlled locally; remote monitor is allowed



Channel settings

For each channel the following parameters can be programmed and monitored either locally or remotely:

Parameter:	Function:	Unit:	Display:
Vmon	High Voltage Monitored value	Volt	
Imon	Current Monitored value	μA	
Vset	High Voltage programmed value	Volt	
Iset	Current Limit programmed value	μA	
MaxV	Absolute maximum High Voltage level that the channel is allowed to reach	V	
Ramp-Up	Maximum High Voltage increase rate	V/s	
Ramp-Down	Maximum High Voltage decrease rate	V/s	
Power Down	Power Down mode after channel TRIP	KILL or RAMP	
Trip	Maximum time an "overcurrent" is allowed to last expressed in seconds	s	
Imon Range	Current Monitor Zoom	H or L	
ZC Detect	Stores IMOn value (IMonZero) into memory for "zero current compensation"; remote only	ON/OFF	
ZC Adjust	Subtracts IMonZero from "non compensated" current value; remote only	EN/DIS	

Local Control

Insert the unit inside a powered NIM crate, and switch it ON. At the power the Display shows for a few seconds the following screen.



Fig. 4.1: Welcome screen

At this point the module is ready to be operated locally. The TUNE ROTARY SWITCH is lit up as long as Local Control is enabled.

HV connection

Verify the channels polarity checking that the polarity LEDs are switched on according to the programmed configuration; verify the HV_EN/OFF/KILL 3 POS. SWITCH of each channel is set to OFF; the Display will show the following message in the left lower row:



Fig. 4.2: Channel OFF status screen

now connect the HV cable linking the outputs to the loads to be supplied and enable the HV outputs switching the HV_EN/OFF/KILL 3 POS. SWITCH in the HV_EN position; the Display will show the following message in the left lower row:

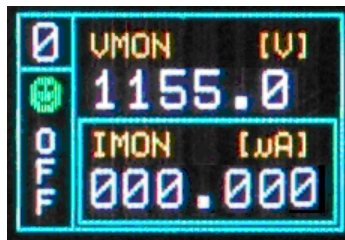


Fig. 4.3: Channel ON status screen

The KILL position of the HV_EN/OFF/KILL 3 POS. SWITCH allows to turn off the module at the fastest available rate; the Display will show the following message in the left lower row:



Fig. 4.4: Channel KILL status screen

Module settings

Module settings are general board settings; turn the TUNE ROTARY SWITCH until this screen is shown:

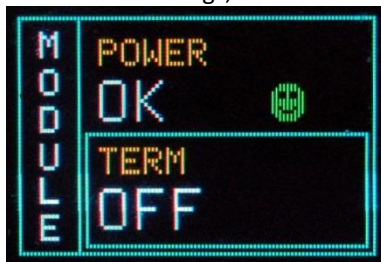


Fig. 4.5: Mode settings status screen

Push the TUNE ROTARY SWITCH in order to access MODULE parameters; the MODULE frame becomes red:

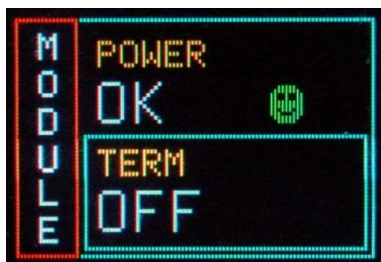


Fig. 4.6: Mode settings access screen

The TUNE ROTARY SWITCH allows to select the parameter to be set; turn the ROTARY SWITCH until such parameter is displayed (for example CONTROL), then select it by pushing the ROTARY SWITCH (the parameter is shown with a red frame as long as it is active):



Fig. 4.7: Mode settings edit screen

Select the desired value by turning the TUNE ROTARY SWITCH and confirm it by pushing the switch itself.

Channel settings

In order to operate Output Channel settings:

Turn the TUNE ROTARY SWITCH until the channel number to be set is displayed in the left upper row (for example Channel 0)

Push the TUNE ROTARY SWITCH: at this point the frame of the left upper row (channel number) becomes red and the channel is selected



Fig. 4.8: Channel settings edit screen

Turn the TUNE ROTARY SWITCH until the parameter to be set (for example VSET) is displayed in the right lower row



Fig. 4.9: Channel VSET select screen

Push the TUNE ROTARY SWITCH: at this point the parameter is selected, its frame is shown in red and its name in blue; it is now possible to change the parameters value



Fig. 4.10: Channel VSET access screen

Turn the TUNE ROTARY SWITCH until the value digit to be edited is shown in blue, the parameter name in yellow



Fig. 4.11: Channel VSET digit selection screen

Push the TUNE ROTARY SWITCH: at this point the value digit becomes yellow and can be edited



Fig. 4.12: Channel VSET digit access screen

Turn the TUNE ROTARY SWITCH until the digit reaches the desired value



Fig. 4.13: Channel VSET digit adjust screen

Confirm it by pushing the TUNE ROTARY SWITCH, the edited digit returns blue



Fig. 4.14: Channel VSET digit confirm screen

Once all the digits are set to the desired value, turn the TUNE ROTARY SWITCH until the parameter name returns blue



Fig. 4.15: Channel VSET confirm screen

Push the TUNE ROTARY SWITCH in order to de-select the parameter, the frame returns to blue



Fig. 4.16: Channel VSET de-select screen

It is now possible to set another parameter; note that the POWER DOWN and IMRANGE setting has not digits to be edited, but two options, TRIP/KILL and HIGH/LOW respectively:



Fig. 4.17: Channel KILL screen

In order to access another channel, the EXIT parameter has to be selected



Fig. 4.18: Channel EXIT screen

Now by turning the TUNE ROTARY SWITCH another channel number to be set can be selected.

If CONTROL MODE is set to REMOTE, the left lower row reports DIS (Disabled), since the channel can be accessed only via the serial links. If the INTERLOCK MODE is changed while one channel is ON, the channel is turned OFF and the left lower row reports ILK (Interlock); if the channel is OFF, it can not be turned ON, until it is enabled according to the Interlock logic.

Group Settings⁶

Group settings allow to broadcast the same parameter value to all channels.

In order to operate Group settings:

Turn the TUNE ROTARY SWITCH until ALL is displayed in the left column

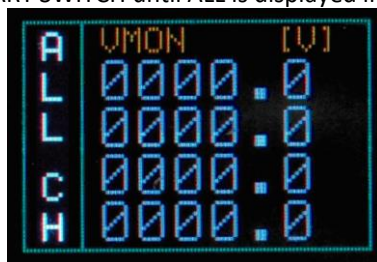


Fig. 4.19: Group selection

Push the TUNE ROTARY SWITCH: at this point the frame of the left column becomes red and the GROUP is selected. Turn the TUNE ROTARY SWITCH until the parameter to be set (for example VSET) is displayed in the right column (all four channels values).

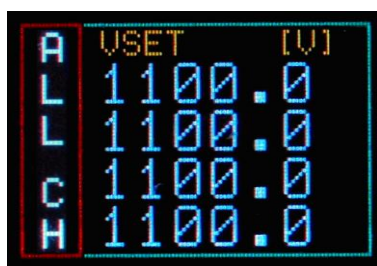


Fig. 4.20: Group active

Push the TUNE ROTARY SWITCH: at this point the parameter is selected, its frame is shown in red and its name in blue (only one value common to all channels; pre-set value is picked from Channel 0); it is now possible to change the parameters value.



Fig. 4.21: Group VSET access screen

Turn the TUNE ROTARY SWITCH until the value digit to be edited is shown in blue, the parameter name in yellow



Fig. 4.22: Group VSET digit selection screen

Push the TUNE ROTARY SWITCH: at this point the value digit becomes yellow and can be edited

⁶ Mod. N1471HB has not group settings; Mod. N1471HA has group settings, 2 channels values are displayed



Fig. 4.23: Group Channel VSET digit access screen

Turn the TUNE ROTARY SWITCH until the digit reaches the desired value



Fig. 4.24: Group VSET digit adjust screen

Confirm it by pushing the TUNE ROTARY SWITCH, the edited digit returns blue



Fig. 4.25: Group VSET digit confirm screen

Once all the digits are set to the desired value, turn the TUNE ROTARY SWITCH until the parameter name returns blue. Push the TUNE ROTARY SWITCH in order to de-select the parameter, the frame returns to blue; when the parameter is not active, the parameter status of the four channels is shown.



Fig. 4.26: Channel VSET de-select screen

In order to go to individual channel settings, the EXIT parameter has to be selected



Fig. 4.27: Group EXIT screen

Smileys

Three types of Smileys in the display indicate:

Table 4.1: Smileys list

Smiley	Meaning
	OK Status
	WARNING Status
	ALARM Status

Current monitor offset calibration

Zero Current Adjustment firmware release 2.06 and newer

If Zero Current Adjustment is enabled, the stored IMON value is subtracted from the measured, “non compensated” IMON value. The returned “compensated” IMON value will be then the difference between measured and stored values; note that the resulting IMON value could assume negative values. The compensation is applied only if the monitored current is smaller than 20% of maximum channel current. This adjustment can be performed only with remote control enabled.

Calibration for Modules running firmware release 2.05 and older

The module is calibrated by introducing a positive offset on the current monitor. This type of calibration allows to monitor very low current thus removing possible issues due to components and working temperatures related negative offsets. The absolute value of delivered current can be quantified by following the steps below:

- 1) Turn on the module, after a warm-up of about 30 minutes with operating voltage and load disconnected (no link between N1471H and detectors) then read the monitored current value $I_{mon} = I_1$ (offset)
- 2) Turn off the channel and connect the load
- 3) Turn on the channel with the same voltage set as point 1)
- 4) Wait a few minutes and read again the current value monitor $I_{mon} = I_2$ (offset + I_{out})
- 5) The value of current output is equal to the difference between I_2 and I_1 ($I_{out} = I_2 - I_1$)

Leakage currents equal to 1 nA / kV shall be tolerated; e.g. $V_{out} = 4000V$, $I_{mon} = +5$ nA (1nA Offset + 4nA current leakage/4KV). The offset introduced is equal to 4nA for high range and 1nA for low range with output voltage at 10% of full scale and 20 °C temperature.

Remote Control

Module control can take place remotely, via USB or RS485; the latter allows to build a N1471Hs' daisy chain network. The CAEN NIM8301 7U 12 Slot Smart Fan Unit 300/600 W Crate allows also to communicate with the module via Ethernet.

Serial Links

USB communication

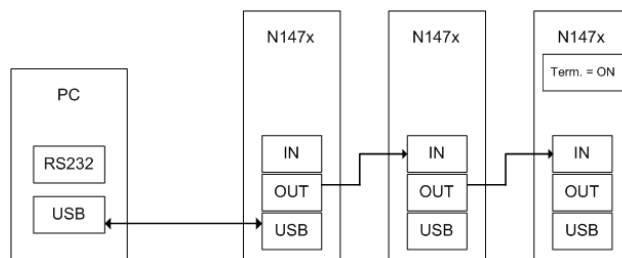


Fig. 4.28: USB communication diagram

The module is provided with a USB2.0 compliant interface. The N1471H can be programmed via PC by connecting the PC USB port with the N1471H USB B-type port; the featured controller, the FT232BM chip requires drivers freely available at www.ftdichip.com (Drivers section); the site also provides installation instructions for all OS's (Documents section)

The connection can be performed via terminal emulator, such as HyperTerminal, configured as follows:

- baud rate 9600 (the same set on the N1471H!)
- Data bits: 8
- Parity: none
- stop bit: 1
- Flow control: Xon Xoff

It is also possible to build a daisy chain of up to 32 N1471H's, with the first module connected to the PC USB port and the subsequent ones daisy chained through the COMM IN/OUT; in this case communication with the chained modules is achieved through the USB - RS485 Communication Protocol. All modules must be assigned a LOCAL BUS ADDRESS different from one another and the last one must be terminated.

RS232 communication

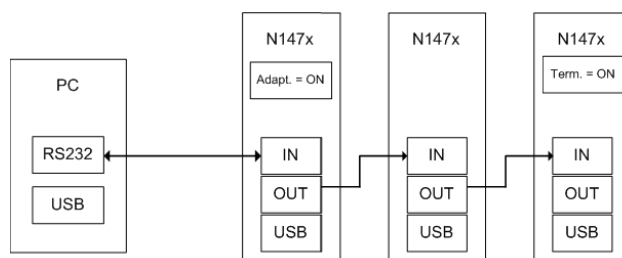


Fig. 4.29: RS232 communication diagram

In order to control the module via RS232 it is necessary to use the module's COMM IN port and to follow adaptation instructions.

The connection can be performed via terminal emulator, such as HyperTerminal, configured as follows:

- baud rate 9600 (the same set on the N1471H!)
- Data bits: 8
- Parity: none
- stop bit: 1
- Flow control: Xon Xoff

It is also possible to build a daisy chain of up to 32 N1471H's, with the first module connected to the PC RS232 port and the subsequent ones daisy chained through the COMM IN/OUT; in this case communication with the chained modules is achieved through the USB - RS485 Communication Protocol. All modules must be assigned a LOCAL BUS ADDRESS different from one another and the last one must be terminated.

RS485 communication

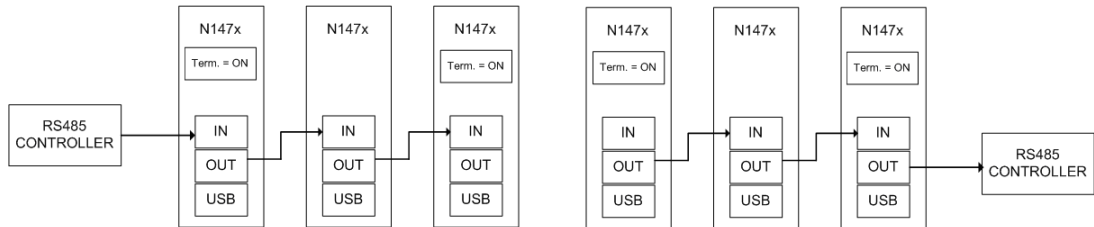


Fig. 4.30: RS485 communication diagram

The COMM IN / OUT connectors implement a RS485 type LOCAL BUS which allows to build a 32 modules daisy chain. This can be achieved through the following steps:

- Connect the connector OUT of a module to corresponding the IN connector of the next one
- Assign to each module a different address (LOCAL BUS ADDR);
- Ensure that the LOCAL BUS BIT RATE is the same for all modules;
- Terminate the first and the last module in the chain

The module control can be done in one of the following ways:

- by connecting a RS485 controller to the first module's COMM IN port
- by connecting a RS485 controller to the last module's COMM OUT port

Communication with the chained modules is achieved only through the USB - RS485 Communication Protocol.

Ethernet communication

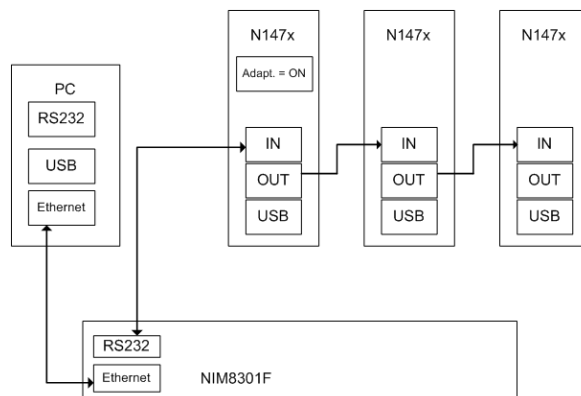


Fig. 4.31: Ethernet communication diagram

It is possible to communicate via Ethernet with one or more daisy chained N1471H modules through the NIM8301 Fan Unit⁷. Communication via Ethernet is possible only through the USB - RS485 Communication Protocol. The single module or the first module of the daisy chain must be connected to the Fan Unit RS232 port through the cable adapter (see figure below) connected to the N1471H COMM IN port; SW[200, 201] switch placed on the Microcontroller board inside the module must be set to Adaptation ON (see § 5).

⁷ The CAEN Mod. NIM8301 is a 7U (5+2) full size NIM crate (19"-12 slot) available with pluggable 300W and 600W power supplies, ventilated by pluggable 2U fan unit. Remote control and monitoring take place through CAN bus, Ethernet, USB and RS232 interfaces.

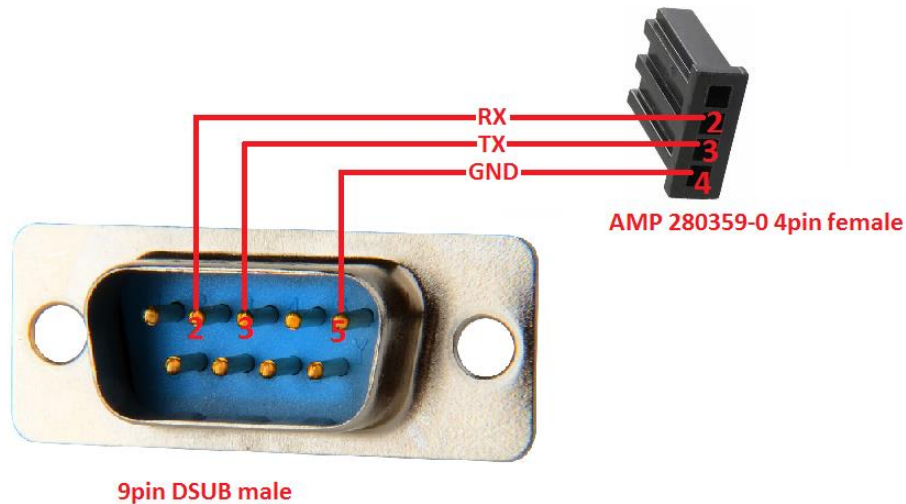


Fig. 4.32: RS232 port cable adapter

Communication Control

In order to launch the communication, type *CAEN* and then <Enter>
As the communication is established, the Main Menu will be displayed.

Remote Control: Main Menu

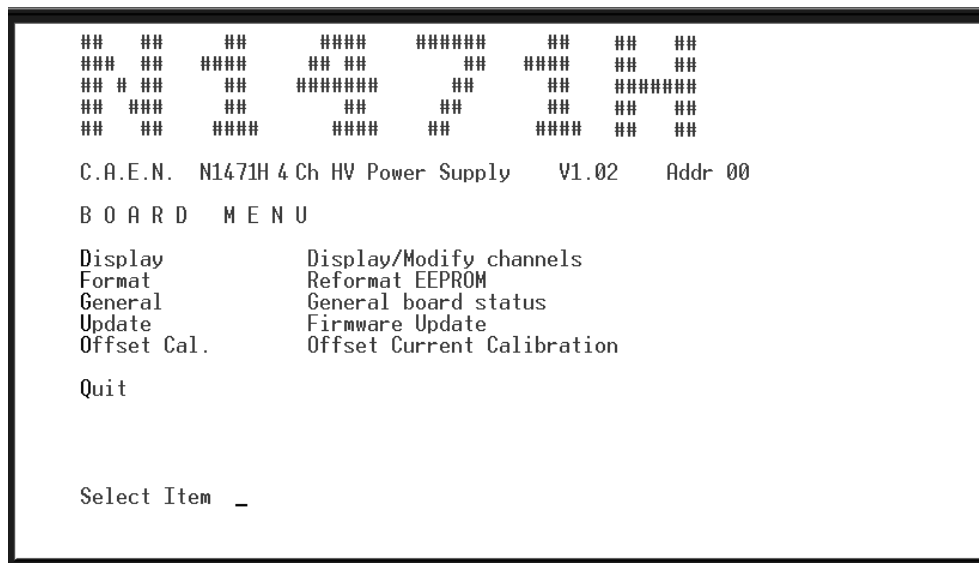


Fig. 4.33: Main Menu

Type **D** to set/monitor channels parameters
Type **F** to format the EEPROM
Type **G** to monitor board status
Type **U** to upgrade the firmware
Type **O** to perform the current offset calibration
Type **Q** to exit the program

Remote Control: General Menu

By typing **G** it is possible to access the General Menu which includes the board's general settings.

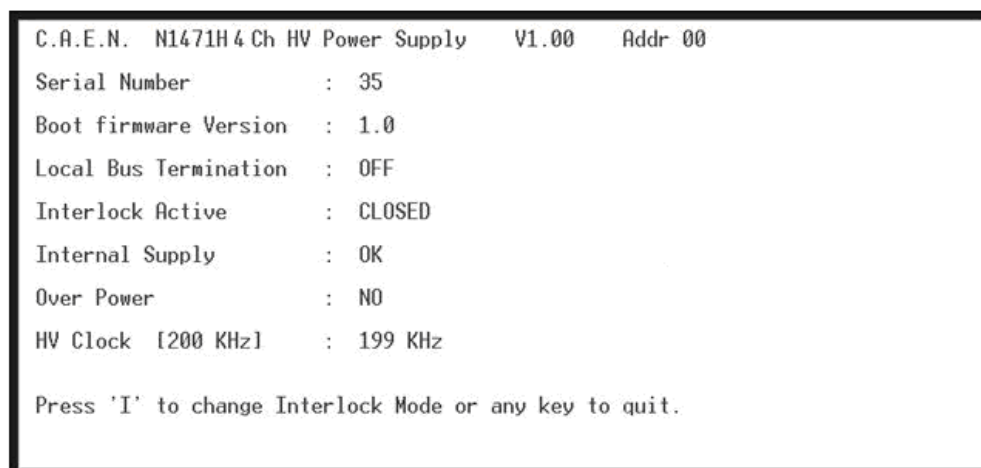


Fig. 4.34: Board Status Menu

Remote Control: Channels Menu

By typing **D** it is possible to monitor and set all the channels parameters. ZC Detect and ZC Adjust parameters are available only with firmware release 2.06 and later; if ZC Adjust is enabled, IMON value could assume negative values.

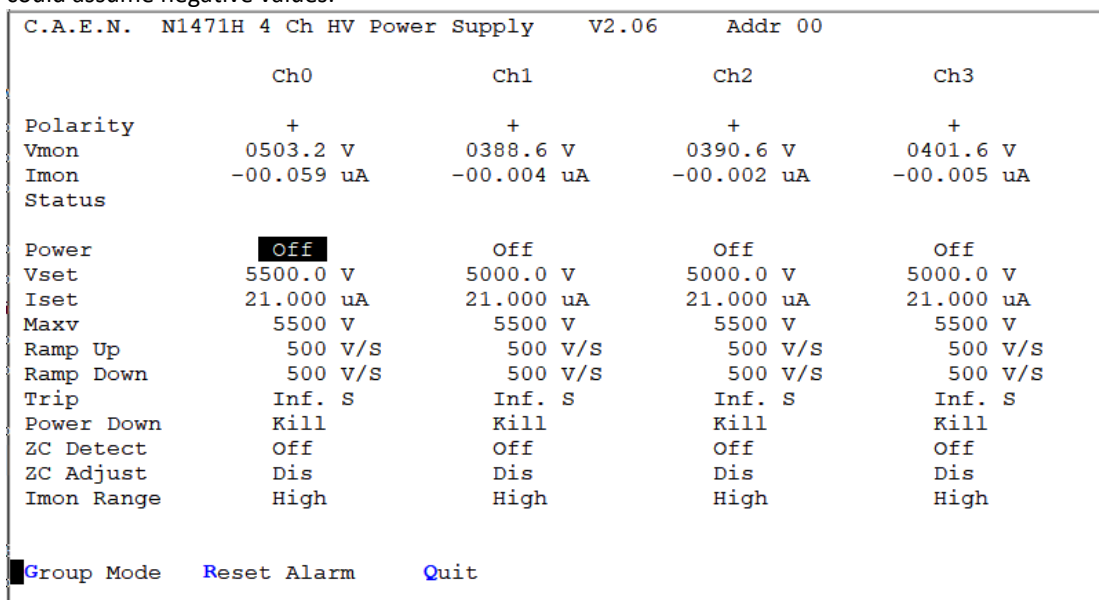


Fig. 4.35: Channels Menu

In order to change one parameter: point the parameter with the arrow keys (see figure below), and type the desired value, confirm by pressing <Enter>; Power and Power Down can be changed using the <Space> bar.

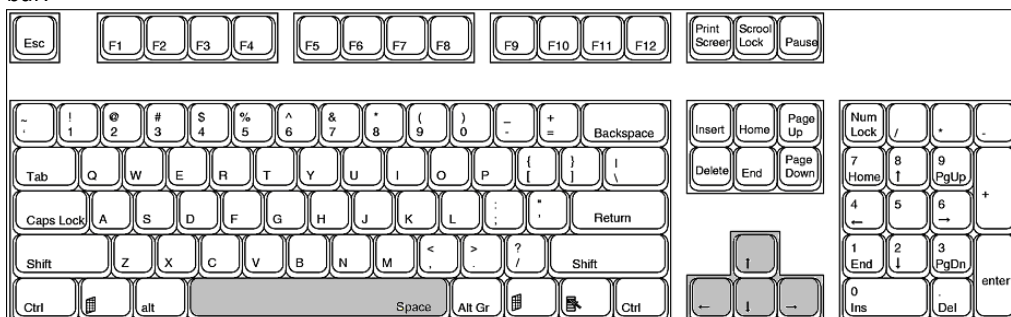


Fig. 4.36: PC keyboard

When one parameter is active, by typing **G** it is possible to make a “group setting”, i.e. broadcast the same value to all channels (the parameter becomes active on all channels, see figure). ZC Detect and ZC Adjust

parameters are available only with firmware release 2.06 and later; if ZC Adjust is enabled, IMON value could assume negative values.

C.A.E.N. N1471H 4 Ch HV Power Supply V2.06 Addr 00				
	Ch0	Ch1	Ch2	Ch3
Polarity	+	+	+	+
Vmon	0503.2 V	0388.6 V	0390.6 V	0401.6 V
Imon	-00.059 uA	-00.004 uA	-00.002 uA	-00.005 uA
Status				
Power	Off	Off	Off	Off
Vset	5500.0 V	5000.0 V	5000.0 V	5000.0 V
Iset	21.000 uA	21.000 uA	21.000 uA	21.000 uA
Maxv	5500 V	5500 V	5500 V	5500 V
Ramp Up	500 V/S	500 V/S	500 V/S	500 V/S
Ramp Down	500 V/S	500 V/S	500 V/S	500 V/S
Trip	Inf. S	Inf. S	Inf. S	Inf. S
Power Down	Kill	Kill	Kill	Kill
ZC Detect	Off	Off	Off	Off
ZC Adjust	Dis	Dis	Dis	Dis
Imon Range	High	High	High	High
Group Mode Reset Alarm Quit				

Fig. 4.37: Channels group setting

Type **Q** to exit the Menu.

Remote Control: firmware upgrade

By typing **U** it is possible to access the firmware upgrade menu:

C.A.E.N. N1471H 4 Ch HV Power Supply V1.00 Addr 00
Firmware Update. Are you sure ? [y/n] _

Fig. 4.38: Firmware Upgrade Menu/1

If <y> is typed, then the following menu is shown:

C.A.E.N. N1471H 4 Ch HV Power Supply V1.00 Addr 00
Firmware Update. Are you sure ? [y/n]
When the message 'Firmware Updating Complete' is displayed, wait few seconds and then press 'caen'.
Resetting ..
Flash Erasing ...
Ready to receive
Please send the new firmware

Fig. 4.39: Firmware Upgrade Menu/2

At this point it is necessary to upload the updated firmware.

If "HyperTerminal" is used it is necessary to perform "Transfer" and "Send Text File" operations by selecting the file "N1471H.xxx"

Remote Control: format EEPROM

By typing **F** it is possible to access the format EEPROM menu:

```
C.A.E.N. N1471H 4 Ch HV Power Supply V1.00
```

```
Format EEPROM. Are you sure ? [y/n]
```

Fig. 4.40: Format EEPROM Menu

After the FORMAT command, all the channels have the following settings:

Vset = 0 V

Iset = 2.1 μ A

Ramp Up / Down = 50 V/s

Trip = 10 s

MaxV = 5600 V

Power Down = Kill

Module setting:

Interlock Mode = Active CLOSED

Remote Control: Current offset calibration (Firmware rel. up to 2.05 only)

By typing **O** it is possible to perform the current offset calibration (the calibration must be performed after 30minutes operation at least); it is necessary to perform a calibration anytime external operating conditions change; the following instructions are displayed:

```
C.A.E.N. N1471H 4 Ch HV Power Supply V1.02 Addr 00
```

```
*** NO LOAD CURRENT CALIBRATION ***
```

```
!!! WARNING !!!
```

```
For this calibration all channels MUST be OFF  
and disconnected from any load.
```

```
Are you sure ? [y/n] _
```

Fig. 4.41: Current offset calibration warning

Once channels are off and disconnected from the load, type **y**; at this point the program asks for the current value (VSET) selected for the offset compensation, such value is common to all channels; factory calibration is performed at 1000V, type VSET then press <ENTER>

```
C.A.E.N. N1471H 4 Ch HV Power Supply V1.03 Addr 00
```

```
*** NO LOAD IMON CALIBRATION ***
```

```
Enter VSET : _
```

Fig. 4.42: Current offset calibration VSET selection

the calibration is performed and the program asks for coefficients to be saved.

```
C.A.E.N. N1471H 4 Ch HV Power Supply V1.02 Addr 00
```

```
*** NO LOAD CURRENT CALIBRATION ***
```

```
Wait for channel Off ...
```

```
Step 1 ... [00 s]
```

```
Step 2 ... [00 s]
```

```
Press 'Q' to exit or any key to save coefficients._
```

Fig. 4.43: Current offset calibration confirmation

USB - RS485 Communication Protocol

The following Protocol allows to communicate with up to 32 daisy chained modules. The Protocol is based on commands made of ASCII characters strings. The protocol requires firmware revision 1.0.1 or greater.

Command Format

The Format of a command string is the following :

\$BD: ,CMD:** ,CH* ,PAR:** ,VAL:**.** <CR, LF >**

The fields that form the command are :

BD : 0..31 module address (to send the command)

CMD : MON, SET

CH : 0..4 (4 for the commands related to all Channels)

PAR : (see parameters tables)

VAL : (numerical value must have a Format compatible with resolution and range)

Format of response string

Format response in case of error

String	Function (Units)
#BD:** ,CMD:ERR	Wrong command Format or command not recognized
#BD:** ,CH:ERR	Channel Field not present or wrong Channel value
#BD:** ,PAR:ERR	Field parameter not present or parameter not recognized
#BD:** ,VAL:ERR	Wrong set value (<Min or >Max)
#BD:** ,LOC:ERR	Command SET with module in LOCAL mode

Each string is terminated by < CR, LF >

Format response in case of correct command

String	Function (Units)
#BD:** ,CMD:OK	command Ok
#BD:** ,CMD:OK,VAL:**	command Ok *** = value for command to individual Channel
#BD:** ,CMD:OK,VAL:**,**	command Ok **,** = values Ch0,1,2,3 for command to all Channels

Numerical value Field '**VAL**' has Format compatible (comma and decimal part) with the resolution and the range related to the parameter.

Each string is terminated by < CR, LF >

MONITOR commands related to the Channels

The following table contains the strings to be used to handle monitor commands related to the Channels. The '**X**' in the Field 'Channel' can be set in the '**0..4**' range.

When '**X=4**' the module returns the values of the parameter of all 4 Channels.

String	Function (Units)
\$BD:xx,CMD:MON,CH:X,PAR:VSET	Read out VSET value (XXXX.X V)
\$BD:xx,CMD:MON,CH:X,PAR:VMIN	Read out VSET minimum value (0 V)
\$BD:xx,CMD:MON,CH:X,PAR:VMAX	Read out VSET maximum value (8000.0 V)
\$BD:xx,CMD:MON,CH:X,PAR:VDEC	Read out VSET number of decimal digits
\$BD:xx,CMD:MON,CH:X,PAR:VMON	Read out VMON value (XXXX.X V)
\$BD:xx,CMD:MON,CH:X,PAR:ISET	Read out ISET value (XXXX.XX μ A)
\$BD:xx,CMD:MON,CH:X,PAR:IMIN	Read out ISET minimum value (0 μ A)
\$BD:xx,CMD:MON,CH:X,PAR:IMAX	Read out ISET maximum value (20.00 μ A)
\$BD:xx,CMD:MON,CH:X,PAR:ISDEC	Read out ISET number of decimal digits
\$BD:xx,CMD:MON,CH:X,PAR:IMON	Read out IMON value (XXXX.XX μ A)

String	Function (Units)
\$BD:xx,CMD:MON,CH:X,PAR:IMRANGE	Read out IMON RANGE value (HIGH / LOW)
\$BD:xx,CMD:MON,CH:X,PAR:IMDEC	Read out IMON number of decimal digits (2 HR, 3 LR)
\$BD:xx,CMD:MON,CH:X,PAR:MAXV	Read out MAXVSET value (XXXX V)
\$BD:xx,CMD:MON,CH:X,PAR:MVMIN	Read out MAXVSET minimum value (0 V)
\$BD:xx,CMD:MON,CH:X,PAR:MVMAX	Read out MAXVSET maximum value (8100 V)
\$BD:xx,CMD:MON,CH:X,PAR:MVDEC	Read out MAXVSET number of decimal digits
\$BD:xx,CMD:MON,CH:X,PAR:RUP	Read out RAMP UP value (XXX V/S)
\$BD:xx,CMD:MON,CH:X,PAR:RUPMIN	Read out RAMP UP minimum value (1 V/S)
\$BD:xx,CMD:MON,CH:X,PAR:RUPMAX	Read out RAMP UP maximum value (500 V/S)
\$BD:xx,CMD:MON,CH:X,PAR:RUPDEC	Read out RAMP UP number of decimal digits
\$BD:xx,CMD:MON,CH:X,PAR:RDW	Read out RAMP DOWN value (XXX V/S)
\$BD:xx,CMD:MON,CH:X,PAR:RDWMIN	Read out RAMP DOWN minimum value (1 V/S)
\$BD:xx,CMD:MON,CH:X,PAR:RDWMAX	Read out RAMP DOWN maximum value (500 V/S)
\$BD:xx,CMD:MON,CH:X,PAR:RDWDEC	Read out RAMP DOWN number of decimal digits
\$BD:xx,CMD:MON,CH:X,PAR:TRIP	Read out TRIP time value (XXXX.X S)
\$BD:xx,CMD:MON,CH:X,PAR:TRIPMIN	Read out TRIP time minimum value (0 S)
\$BD:xx,CMD:MON,CH:X,PAR:TRIPMAX	Read out TRIP time maximum value (1000.0 S)
\$BD:xx,CMD:MON,CH:X,PAR:TRIPDEC	Read out TRIP time number of decimal digits
\$BD:xx,CMD:MON,CH:X,PAR:PDWN	Read out POWER DOWN value (RAMP / KILL)
\$BD:xx,CMD:MON,CH:X,PAR:POL	Read out POLARITY value ('+' / '-')
\$BD:xx,CMD:MON,CH:X,PAR:STAT	Read out Channel status value (XXXXX)
\$BD:xx,CMD:MON,CH:X,PAR:ZCDTC	Status of ZC Detect; ON = offset current is getting stored; OFF = ready to store offset current
\$BD:xx,CMD:MON,CH:X,PAR:ZCADJ	Status of ZC Adjust (EN/DIS)

Meaning of STATUS bits (value read in decimal Format)

Bit	Function
Bit 0 → ON	1 : ON 0 : OFF
Bit 1 → RUP	1 : Channel Ramp UP
Bit 2 → RDW	1 : Channel Ramp DOWN
Bit 3 → OVC	1 : IMON >= ISET
Bit 4 → OVV	1 : VMON > VSET + 250 V
Bit 5 → UNV	1 : VMON < VSET - 250 V
Bit 6 → MAXV	1 : VOUT in MAXV protection
Bit 7 → TRIP	1 : Ch OFF via TRIP (Imon >= Iset during TRIP)
Bit 8 → OVP	1 : Power Max; Power Out > 0.12W
Bit 9 → OVT	1: TEMP > 105°C
Bit 10 → DIS	1 : Ch disabled (REMOTE Mode and Switch on OFF position)
Bit 11 → KILL	1 : Ch in KILL via front panel
Bit 12 → ILK	1 : Ch in INTERLOCK via front panel
Bit 13 → NOCAL	1 : Calibration Error
Bit 14, 15 → N.C.	

MONITOR commands related to the module

The following table shows the strings to be used to handle monitor commands related to the module.

String	Function (Units)
\$BD:xx,CMD:MON,PAR:BDNAME	Read out module name (N1471H)
\$BD:xx,CMD:MON,PAR:BDNCH	Read out number of Channels present (4)
\$BD:xx,CMD:MON,PAR:BDFREL	Read out Firmware Release (XX.X)

\$BD:xx,CMD:MON,PAR:BDSNUM	Read out value serial number (XXXXX)
\$BD:xx,CMD:MON,PAR:BDILK	Read out INTERLOCK status (YES/NO)
\$BD:xx,CMD:MON,PAR:BDILKM	Read out INTERLOCK mode (OPEN/CLOSED)
\$BD:xx,CMD:MON,PAR:BDCTR	Read out Control Mode (LOCAL / REMOTE)
\$BD:xx,CMD:MON,PAR:BDTERM	Read out LOCAL BUS Termination status (ON/OFF)
\$BD:xx,CMD:MON,PAR:BDALARM	Read out Board Alarm status value (XXXXX)

Meaning of Board Alarm bits

Bit	Function
Bit 0 → CH0	1 : Ch0 in Alarm status
Bit 1 → CH1	1 : Ch1 in Alarm status
Bit 2 → CH2	1 : Ch2 in Alarm status
Bit 3 → CH3	1 : Ch3 in Alarm status
Bit 4 → PWFAIL	1 : Board in POWER FAIL
Bit 5 → OVP	1 : Board in OVER POWER
Bit 6 → HVCKFAIL	1 : Internal HV Clock FAIL (≠ 200±10kHz)

SET commands related to the Channels

The following table contains the strings to be used to handle set commands related to the Channels. The 'X' in the Field 'Channel' can be set to the '0..(N-1)' values.⁸

When 'X=N' the command is issued to all Channels.

String	Function (Units)
\$BD:xx,CMD:SET,CH:X,PAR:VSET,VAL:XXXX.X	Set VSET value
\$BD:xx,CMD:SET,CH:X,PAR:ISET,VAL:XXXX.XX	Set ISET value
\$BD:xx,CMD:SET,CH:X,PAR:MAXV,VAL:XXXX	Set MAXVSET value
\$BD:xx,CMD:SET,CH:X,PAR:RUP,VAL:XXX	Set RAMP UP value
\$BD:xx,CMD:SET,CH:X,PAR:RDW,VAL:XXX	Set RAMP DOWN value
\$BD:xx,CMD:SET,CH:X,PAR:TRIP,VAL:XXXX.X	Set TRIP time value
\$BD:xx,CMD:SET,CH:X,PAR:PDWN,VAL:RAMP/KILL	Set POWER DOWN mode value
\$BD:xx,CMD:SET,CH:X,PAR:IMRANGE,VAL:HIGH/LOW	Set IMON RANGE value
\$BD:xx,CMD:SET,CH:X,PAR:ON	Set Ch ON
\$BD:xx,CMD:SET,CH:X,PAR:OFF	Set Ch OFF
\$BD:xx,CMD:SET,CH:X,PAR:ZCDTC	If ON, it stores the present IMON value into memory for "zero current compensation" purposes
\$BD:xx,CMD:SET,CH:X,PAR:ZCADJ,VAL:EN/DIS	If enabled, the stored IMON value via ZCDetect option is subtracted from the measured, "non compensated" IMON value. The returned "compensated" IMON value will be then the difference between measured and stored values; if disabled, the returned IMON value is not compensated.

SET commands related to the module

String	Function (Units)
\$BD:xx,CMD:SET,PAR:BDILKM,VAL:OPEN/CLOSED	Set Interlock Mode
\$BD:xx,CMD:SET,PAR:BDCLR	Clear alarm signal

⁸ N is the number of channels

5 Internal Settings

Polarity selection

The output polarity is independently selectable for each channel. Note that the polarity is indicated by two LEDs for each channel on the front panel.

In order to change the polarity:

- Wear Antistatic Gloves
- Switch off the unit
- Wait for the complete discharge of the capacitors.
- Lay down the unit, right side up
- Remove screws 1, 2, 3, 4, 5, 6, see figure (red):

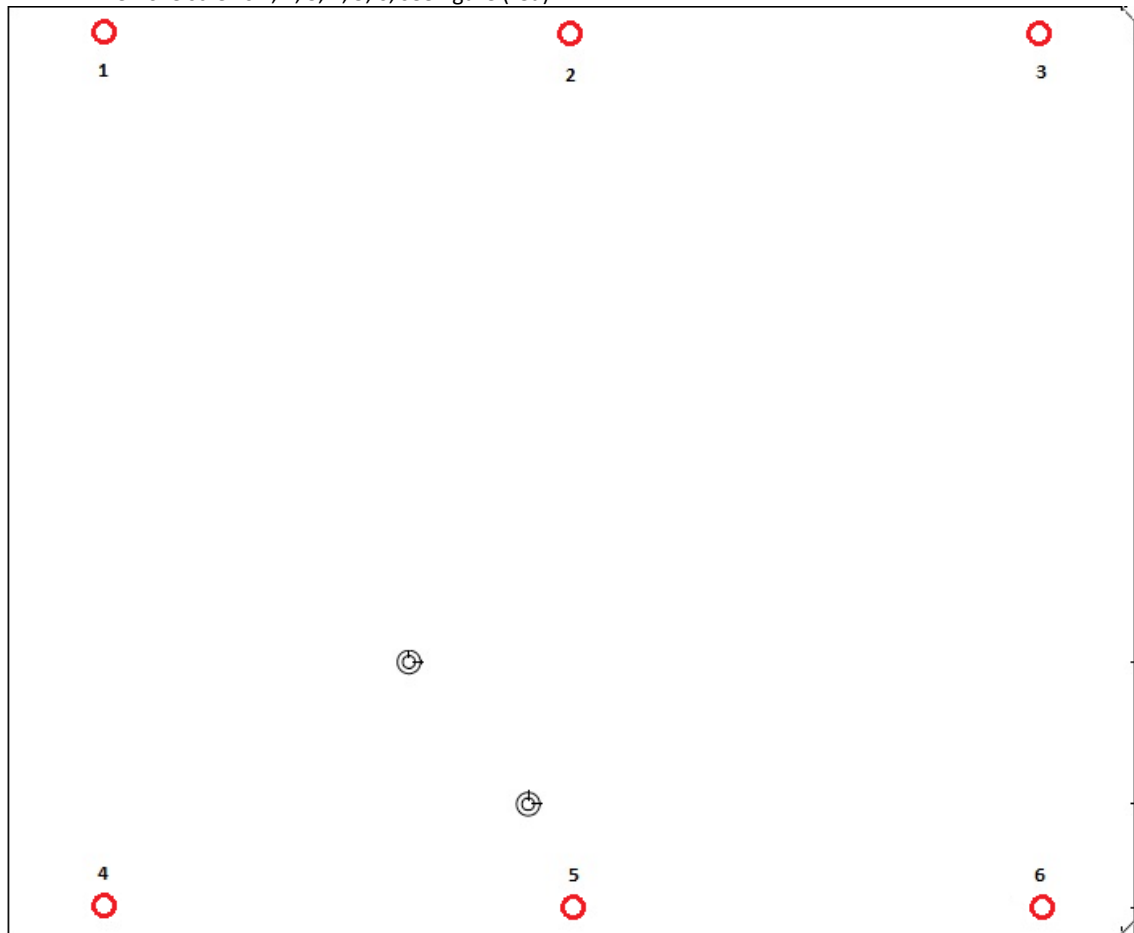


Fig. 5.1: Side cover removal instructions

- Lift the side cover gently
- At this point it is possible to change the channel polarity: refer to the following figure (the blue arrow indicates diode bridge box placed to configure channel as POSITIVE).
- During this operation pay attention not to bend the pins, as they are plugged completely in their sockets

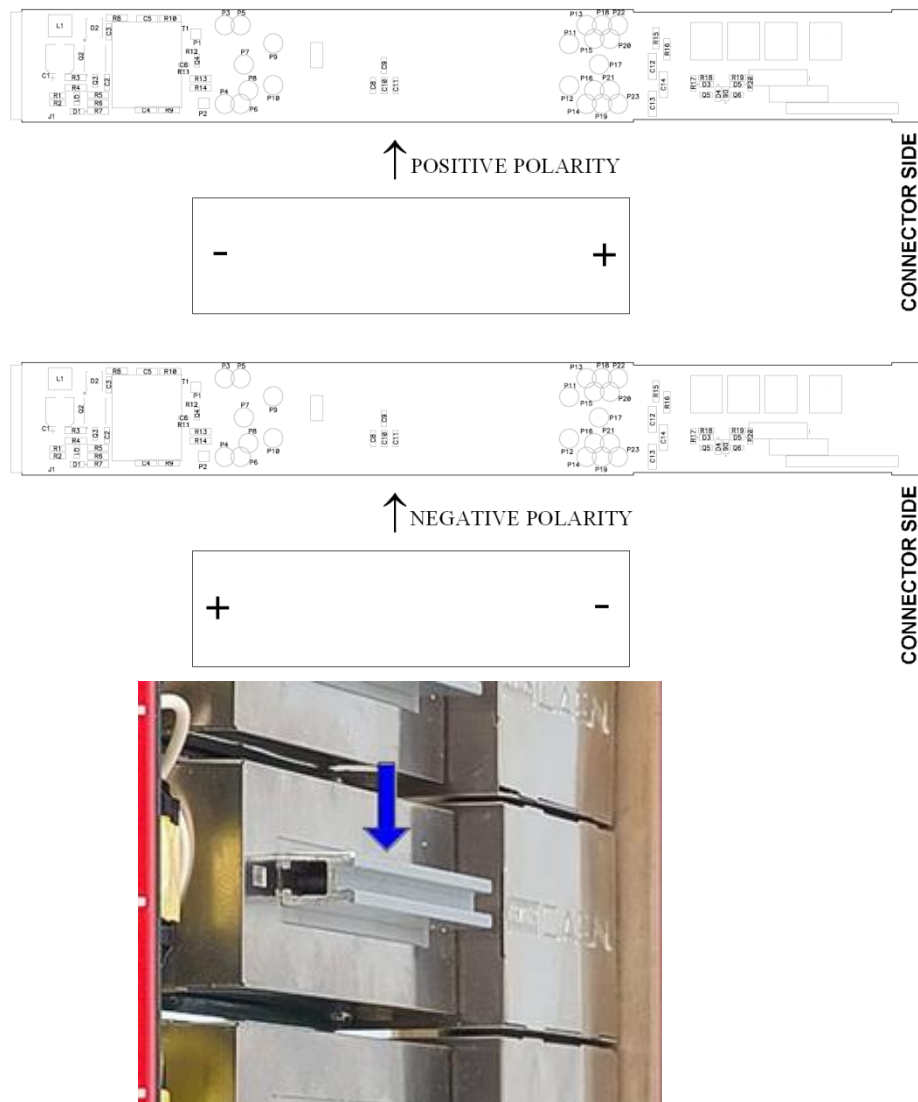


Fig. 5.2: Polarity selection instructions

- In order to choose the POSITIVE POLARITY, plug the diode bridge box, with the + symbol towards the connector side.
 - In order to choose the NEGATIVE POLARITY, plug the diode bridge box, with the - symbol towards the connector side.
 - Always pull and plug the diode bridge box by holding it on the handle pointed by the arrow in Fig. above.
- Once settings are done, put the right side cover back in place with screws 1, 2, 3, 4, 5, 6.

Internal switches

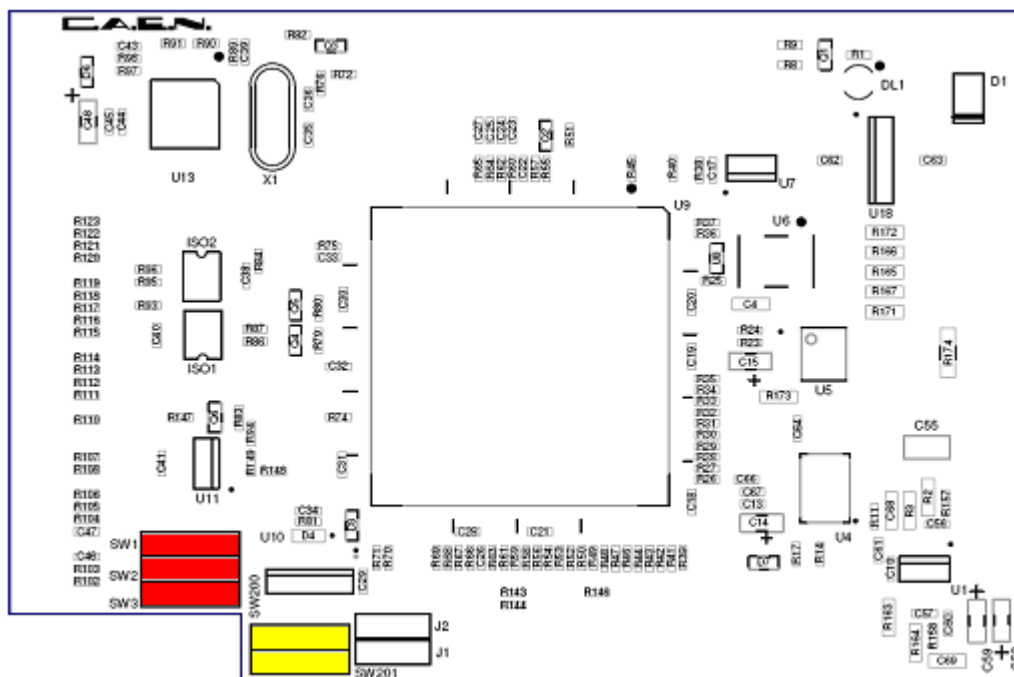


Fig. 5.3: Dip switch position

Local Bus termination

The SW[1..3] switch placed on the Microcontroller board inside the module (behind the *Remote communication control section*), allows to terminate the Local Bus for daisy chain purposes; dot NOT visible = Termination ON.

RS485 – RS232 conversion

The SW[200, 201] switch placed on the Microcontroller board inside the module, allows to adapt RS485 signals to RS232; dot visible = Adaptation ON.

Grounding specifications

The Mod. N14xx channels share a common floating return (FAGND), insulated from the crate ground (AGND). This feature allows on-detector grounding, thus avoiding loops which may increase noise level. FAGND and AGND may be connected, by short circuiting C21 jumper pins on the motherboard (see figure below). The protection shield must be screwed off in order to access C21. Please note that older versions of the N14xx may not have C21 jumper installed; contact info@caen.it for details.

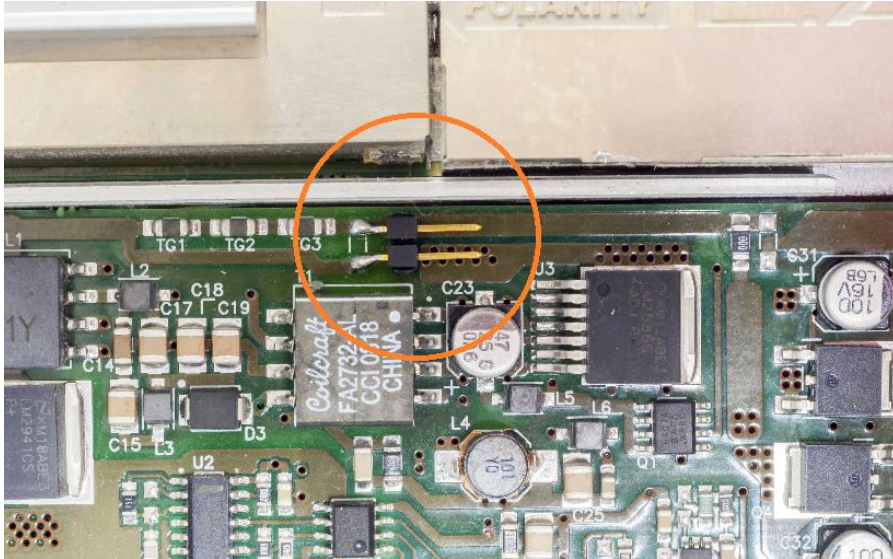


Fig. 5.4: C21 jumper location

Safety Earth connection

The connection of return to Earth is fundamental for User safety. The connection must always be at the level of detector or power supply system.

Return connection even if not present or performed incorrectly, due to protection circuits implemented on the N14xx are bound to Earth; in this case the voltage difference between return and Earth (System), is limited to approximately 50V. Please note that this is a status of emergency-protection, not a working one. The Connector Configurator allows to optimize the connection of the return and of AGND (Earth). The best configuration must be determined by the user upon application, the optimal connection depends on many characteristics of the related experiment.

The following diagrams show two examples of configuration, namely:

The "closed loop " Earth configuration (C21 contacts closed)

The "open loop" Earth configuration (C21 contacts open)

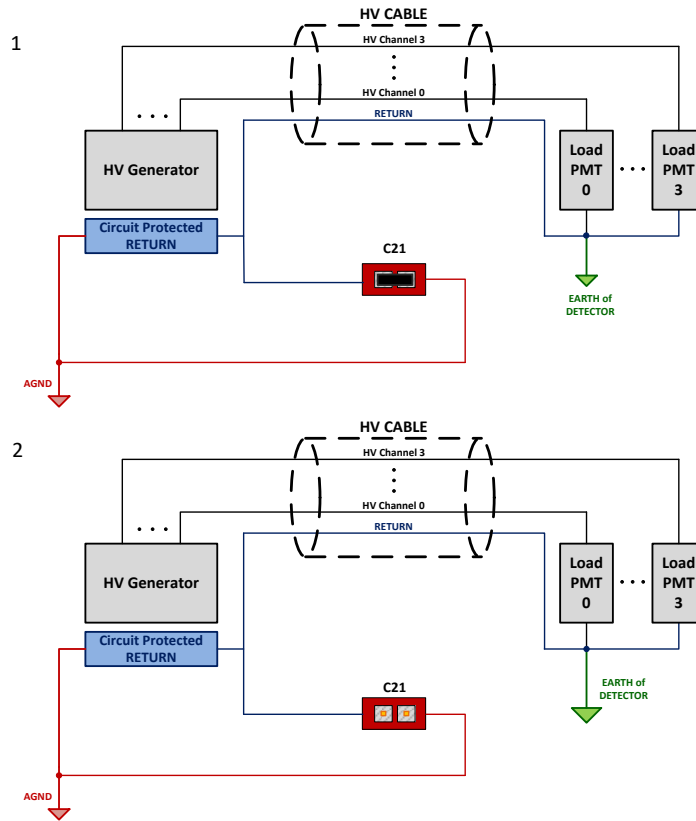


Fig. 5.5: Earth configuration connection examples

6 Instructions for Cleaning

The equipment may be cleaned with isopropyl alcohol or deionized water and air dried. Clean the exterior of the product only.

Do not apply cleaner directly to the items or allow liquids to enter or spill on the product.

Cleaning the Touchscreen

To clean the touchscreen (if present), wipe the screen with a towelette designed for cleaning monitors or with a clean cloth moistened with water.

Do not use sprays or aerosols directly on the screen; the liquid may seep into the housing and damage a component. Never use solvents or flammable liquids on the screen.

Cleaning the air vents

It is recommended to occasionally clean the air vents (if present) on all vented sides of the board. Lint, dust, and other foreign matter can block the vents and limit the airflow. Be sure to unplug the board before cleaning the air vents and follow the general cleaning safety precautions.

General cleaning safety precautions

CAEN recommends cleaning the device using the following precautions:

- Never use solvents or flammable solutions to clean the board.
- Never immerse any parts in water or cleaning solutions; apply any liquids to a clean cloth and then use the cloth on the component.
- Always unplug the board when cleaning with liquids or damp cloths.
- Always unplug the board before cleaning the air vents.
- Wear safety glasses equipped with side shields when cleaning the board

7 Device decommissioning

After its intended service, it is recommended to perform the following actions:

- Detach all the signal/input/output cable
- Wrap the device in its protective packaging
- Insert the device in its packaging (if present)



**THE DEVICE SHALL BE STORED ONLY AT THE ENVIRONMENT
CONDITIONS SPECIFIED IN THE MANUAL, OTHERWISE PERFORMANCES
AND SAFETY WILL NOT BE GUARANTEED**

8 Disposal

The disposal of the equipment must be managed in accordance with Directive 2012/19 / EU on waste electrical and electronic equipment (WEEE).



The crossed bin symbol indicates that the device shall not be disposed with regular residual waste.



9 Technical Support

To contact CAEN specialists for requests on the software, hardware, and board return and repair, it is necessary a MyCAEN+ account on www.caen.it:

<https://www.caen.it/support-services/getting-started-with-mycaen-portal/>

All the instructions for use the Support platform are in the document:




A paper copy of the document is delivered with CAEN boards.

The document is downloadable for free in PDF digital format at:

https://www.caen.it/wp-content/uploads/2022/11/Safety_information_Product_support_W.pdf

**CAEN S.p.A.**

Via Vetràia 11
55049 - Viareggio
Italy
Phone +39 0584 388 398
Fax +39 0584 388 959
info@caen.it
www.caen.it

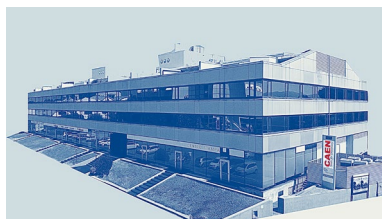**CAEN GmbH**

Brunnenweg 9
64331 Weiterstadt
Germany
Tel. +49 (0)212 254 4077
Mobile +49 (0)151 16 548 484
info@caen-de.com
www.caen-de.com

CAEN Technologies, Inc.

1 Edgewater Street - Suite 101
Staten Island, NY 10305
USA
Phone: +1 (718) 981-0401
Fax: +1 (718) 556-9185
info@caentechnologies.com
www.caentechnologies.com

CAENspa INDIA Private Limited

B205, BLDG42, B Wing,
Azad Nagar Sangam CHS,
Mhada Layout, Azad Nagar, Andheri (W)
Mumbai, Mumbai City,
Maharashtra, India, 400053
info@caen-india.in
www.caen-india.in



Copyright © CAEN SpA. All rights reserved. Information in this publication supersedes all earlier versions. Specifications subject to change without notice.