

# Register your device

Register your device to your **MyCAEN+** account and get access to our customer services, such as notification for new firmware or software upgrade, tracking service procedures or open a ticket for assistance. **MyCAEN+** accounts have a dedicated support service for their registered products. A set of basic information can be shared with the operator, speeding up the troubleshooting process and improving the efficiency of the support interactions.

**MyCAEN+** dashboard is designed to offer you a direct access to all our after sales services. Registration is totally free, to create an account go to <https://www.caen.it/become-mycaenplus-user> and fill the registration form with your data.



<https://www.caen.it/become-mycaenplus-user/>

# Purpose of this Manual

This document is the A7030-AG7030 3kV/ 1mA (1.5W) HV Boards user manual; it contains information about the installation, the configuration and the use of the board.

## Change Document Record

Date	Revision	Changes
30 March 2015	0	PRELIMINARY Release
9 April 2015	1	Updated Overview and Channel status
5 June 2015	2	Updated Technical Specifications
1 July 2015	3	Update to new range 3kV/1mA
30 July 2015	4	Updated Channel specs p.5, set/mon parameters p.10
10 November 2015	5	Updated with 12, 24, 36 channel versions
13 April 2016	6	Updated pictures and table 2
03 September 2019	7	Updated Table1

## Symbols, abbreviated terms and notation

T.B.D.

## Reference Documents

---

### Disclaimer


No part of this manual may be reproduced in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of CAEN SpA.

CAEN will repair or replace any product within the guarantee period if the Guarantor declares that the product is defective due to workmanship or materials and has not been caused by mishandling, negligence on behalf of the User, accident or any abnormal conditions or operations.

CAEN declines all responsibility for damages or injuries caused by an improper use of the Modules due to negligence on behalf of the User. It is strongly recommended to read thoroughly the CAEN User's Manual before any kind of operation. *CAEN reserves the right to change partially or entirely the contents of this Manual at any time and without giving any notice.*

**Disposal of the Product** *The product must never be dumped in the Municipal Waste. Please check your local regulations for disposal of electronics products.*

**Made In Italy** : We stress the fact that all the boards are made in Italy because in this globalized world, where getting the lowest possible price for products sometimes translates into poor pay and working conditions for the people who make them, at least you know that who made your board was reasonably paid and worked in a safe environment. (this obviously applies only to the boards marked "Made in Italy", we cannot attest to the manufacturing process of "third party" boards).

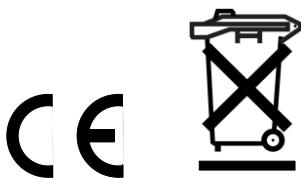

---

## Index

<b>1. Overview.....</b>	<b>4</b>
Functional description .....	4
Channel Characteristic Table .....	5
Front Panel.....	6
Component Specifications .....	7
Packaging .....	7
Displays .....	7
Trimmers.....	7
External connections.....	7
<i>Multipin connector pin assignment</i> .....	8
<b>2. Safety and installation requirements .....</b>	<b>9</b>
General safety information.....	9
Injury Precautions .....	9
Safety Terms and Symbols on the Product .....	9
Installation .....	9
<b>3. Operating modes.....</b>	<b>10</b>
Output control and monitoring .....	10
Channel STATUS Flag.....	10
Interlock protection .....	11
Grounding specifications .....	11
Safety Earth connection .....	12

## List of Figures

Fig. 1 – A7030 family front panel (48/36/24 Multipin, 24 SHV and 12 SHV channel version) .....	6
Fig. 2 – INTERLOCK electrical scheme .....	11
Fig. 3 – J1 jumper location .....	11
Fig. 4 – Earth configuration connection examples.....	12

## List of Tables

Table 1 – Channel characteristics of the Mod. A7030 / AG7030 HV Board .....	5
Table 2 – 52 pin connector assignment.....	8

# 1. Overview

## Functional description

The Mod. A7030 – AG7030 is a family of multi channel HV boards, available with either positive or negative polarity, compatible with the CAEN Universal Multichannel Power Supply System<sup>1</sup> (SY1527, SY2527, SY4527, SY5527).

The A7030 channels share a common floating return, which allows on-detector grounding reducing the noise level; the floating return is insulated from the crate earth up to  $\pm 50$  V; the return of the AG7030 channels is wired to the crate Earth reference.

The output voltage range is  $0 \div 3$  kV, with 1 mA maximum output current and 50mV set and 10mV monitor resolution. Maximum delivered output power is 1.5W per channel.

The boards are provided with both current and voltage protections.

Two output current limits are foreseen:

- ISet; software limit, individually set for each channel; if exceeded, the relevant channel is signalled in Overcurrent
- IMax; hardware limit, common to all channels, set via front panel trimmer and monitored via software; if exceeded the relevant channel can be programmed either to turn off after a programmable trip time or to keep on providing the maximum allowed current: this particular feature allows the module to work as current generator.

The maximum output voltage can be fixed, through a trimmer located on the front panel, at the same common value for all the board channels and this value can be read out via software. The boards have also the safety board interlock (see p. 11).

The HV RAMP-UP and RAMP-DOWN rates may be selected independently for each channel in the  $1 \div 500$  V/s range (1 V/s step).

The boards are available with 12, 24, 36 and 48 channels; see also table below:

Model	No. of channels	HV connector	Width	Return
A7030D	12	SHV	Single (5TE)	Common Floating
A7030S	24	SHV	Double (10TE)	Common Floating
A7030L	24	Radiall 52pin	Single (5TE)	Common Floating
A7030T	36	Radiall 52pin	Single (5TE)	Common Floating
A7030	48	Radiall 52pin	Single (5TE)	Common Floating
AG7030D	12	SHV	Single (5TE)	Earth
AG7030S	24	SHV	Double (10TE)	Earth
AG7030L	24	Radiall 52pin	Single (5TE)	Earth
AG7030T	36	Radiall 52pin	Single (5TE)	Earth
AG7030	48	Radiall 52pin	Single (5TE)	Earth

<sup>1</sup> Please verify that the Syx527 system is running the latest firmware release

## Channel Characteristic Table

Table 1 – Channel characteristics of the Mod. A7030 / AG7030 HV Board

<b>Polarity</b>	Positive / Negative depending on purchased version
<b>Output Voltage</b>	0 ÷ 3 kV
<b>Max. Output Current</b>	1mA
<b>VSet Resolution</b>	50 mV
<b>VMon Resolution</b>	10 mV
<b>Current Set Resolution</b>	20 nA
<b>Current Monitor Resolution</b>	2 nA
<b>IMAX hardware</b>	0÷1 mA
<b>IMAX hardware resolution</b>	1 $\mu$ A
<b>IMAX hardware accuracy</b>	<± 1% of FSR
<b>VMAX hardware</b>	0 ÷ 3 kV common for all the board channels
<b>VMAX hardware resolution</b>	1 V
<b>VMAX hardware accuracy</b>	<± 1% of FSR
<b>VMAX software</b>	0 ÷ 3 kV settable for each channel
<b>VMAX software resolution</b>	1 V
<b>Ramp Up / Ramp Down</b>	1÷ 500 Volt/sec, 1 Volt/sec step
<b>Voltage Ripple <sup>2</sup></b>	10 ÷ 1000 Hz > 1000 Hz
	<15 mV typical; 20 mV max
	<5 mV typical; 10 mV max
<b>VMon vs. VOut Accuracy <sup>3,4</sup></b>	typical: ± 0.3% ± 0.2 V max: ± 0.3% ± 1 V
<b>VSet vs. VMon Accuracy <sup>2</sup></b>	typical: ± 0.3% ± 0.2 V max: ± 0.3% ± 1 V
<b>IMon vs. IOut Accuracy <sup>2</sup></b>	typical: ± 1% ± 100 nA max: ± 1% ± 1 $\mu$ A
<b>Maximum output power</b>	1.5 W (per channel)
<b>Consumption @ full power</b>	48 channels (A7030): 160 W 36 channels (A7030T): 120 W 24 channels (A7030S, A7030L): 90 W 12 channels (A7030D): 50 W

<sup>2</sup> From 10 Hz to 20 MHz at full load; ripple may exceed such limits whenever OVC and UNV occur (see Output control and monitoring)

<sup>3</sup> From 10% to 90% of Full Scale Range

<sup>4</sup> During operation in Overcurrent or when VMAX Hardware is reached (and/or exceeded), VMON values have to be assumed as "indication"; possible monitor drifts are caused by the different regulation mode.

## Front Panel

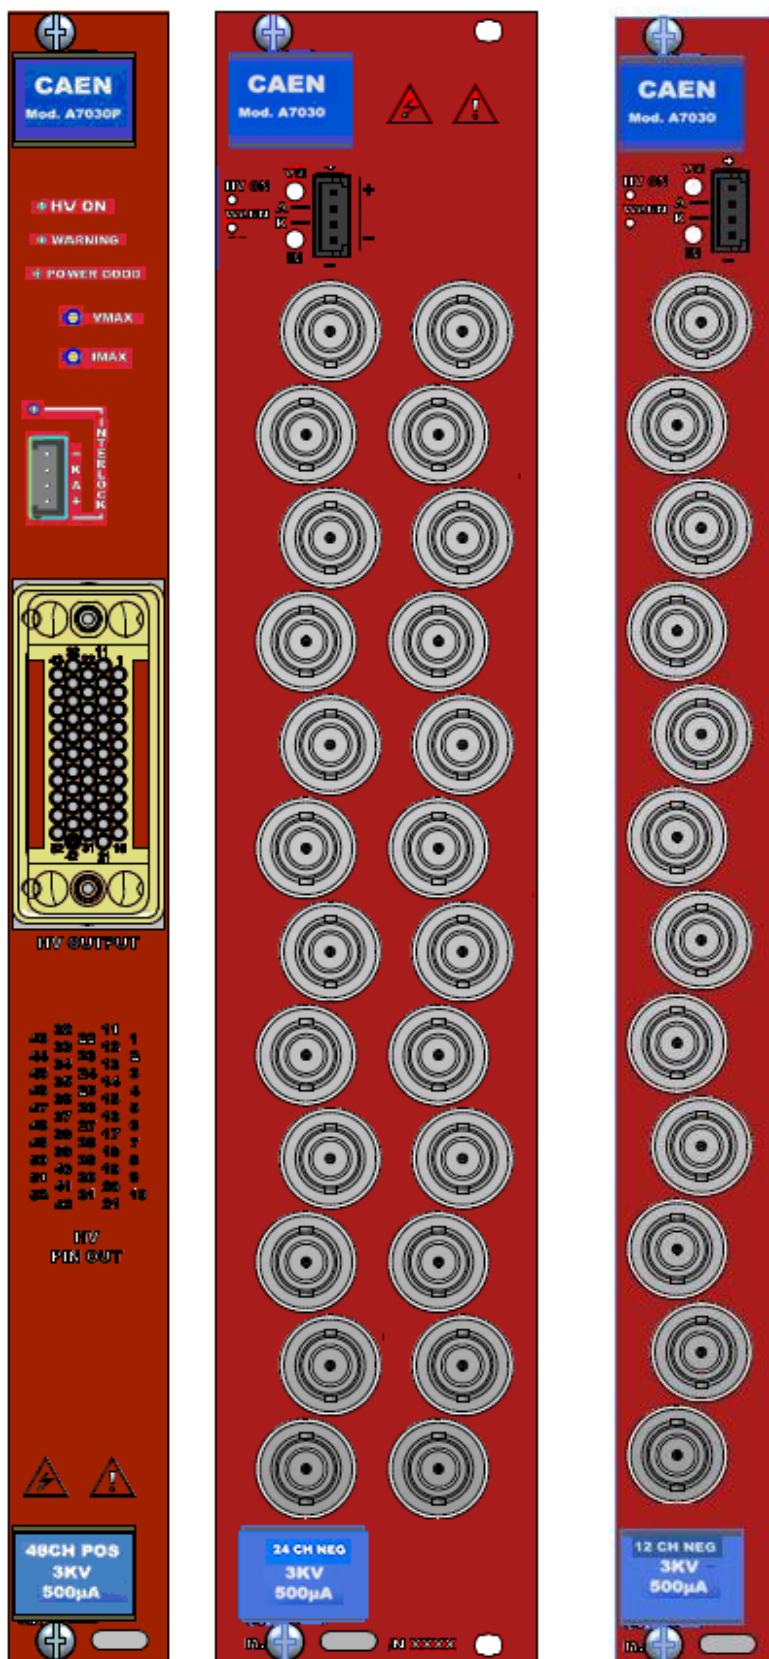


Fig. 1 – A7030 family front panel (48/36/24 Multipin, 24 SHV and 12 SHV channel version)

## Component Specifications

### Packaging

All models are single width (5 TE), except A/AG-7030S that are double width (10TE). Height is 6U.

### Displays

<b>HV ON LED</b>	lights up as at least one channel is on; red: positive polarity; yellow: negative polarity.
<b>POWER GOOD</b>	Board correctly powered
<b>WARNING</b>	Warning status detected (over current, over/under voltage, trip, external disable)
<b>INTERLOCK LED</b>	<i>Function:</i> Red LED. Lights up as the board is in INTERLOCK (channel are disabled) <sup>5</sup> .

### Trimmers

<b>VMAX:</b>	<i>Function:</i> it allows to adjust the hardware maximum voltage VMAX common to all the channels. Its value can be read out via software.
<b>IMAX:</b>	<i>Function:</i> it allows to adjust the hardware maximum current IMAX common to all the channels. Its value can be read out via software.

### External connections

The specifications of the external connectors are listed in the following subsections.

<b>Series:</b>	A/AG-7030-7030L-7030T	A/AG-7030D-7030S
<b>Output Channels:</b>	Multipin connector Radiall 691803004 type, 52 pin male (to be mated with Radiall 691802002 [SCEM 09.41.34.700.2] type <sup>6</sup> ); see Table below	HV coaxial connectors Radiall SHVR317580
<b>INTERLOCK (see p. 11):</b>	AMP 280371-2	AMP 280371-2


<sup>5</sup> Not available on A/AG-7030D-7030S

<sup>6</sup> Requires 52 pins Radiall 691804300 [SCEM 09.41.33.830.7] type, to be inserted using the insertion/extraction tool Radiall 282549024 [SCEM 34.95.17.125.3] type.

**Multipin connector pin assignment**

Table 2 – 52 pin connector assignment

**A/AG7030 – 7030T (CH36..47 N.C. on A7030T & AG7030T)**

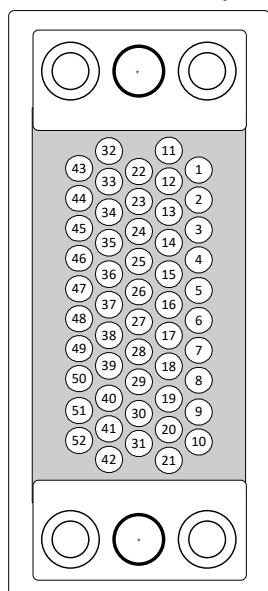


#	function
1	CH02
2	CH07
3	CH12
4	CH17
5	CH22
6	CH27
7	CH32
8	CH37
9	CH42
10	CH47
11	RETURN
12	CH04
13	CH09
14	CH14
15	CH19
16	CH24
17	CH29
18	CH34
19	CH39
20	CH44
21	RETURN

#	function
22	CH01
23	CH06
24	CH11
25	CH16
26	CH21
27	CH26
28	CH31
29	CH36
30	CH41
31	CH46
32	RETURN

#	function
33	CH03
34	CH08
35	CH13
36	CH18
37	CH23
38	CH28
39	CH33
40	CH38
41	CH43
42	SAFETY LOOP

#	function
43	CH00
44	CH05
45	CH10
46	CH15
47	CH20
48	CH25
49	CH30
50	CH35
51	CH40
52	CH45

**A/AG7030L**

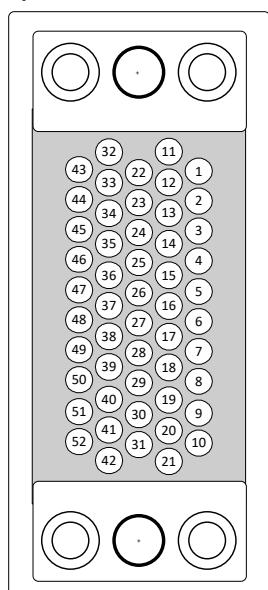

#	function
1	N.C.
2	N.C.
3	CH23
4	N.C.
5	N.C.
6	N.C.
7	N.C.
8	N.C.
9	S_LOOP
10	RETURN
11	RETURN
12	N.C.
13	N.C.
14	CH18
15	CH19
16	CH20
17	CH21
18	CH22
19	N.C.
20	N.C.
21	RETURN

#	function
22	N.C.
23	N.C.
24	CH12
25	CH13
26	CH14
27	CH15
28	CH16
29	CH17
30	N.C.
31	N.C.
32	RETURN

#	function
33	N.C.
34	CH6
35	CH7
36	CH8
37	CH9
38	CH10
39	CH11
40	N.C.
41	N.C.
42	RETURN

#	function
43	N.C.
44	N.C.
45	CH0
46	CH1
47	CH2
48	CH3
49	CH4
50	CH5
51	N.C.
52	N.C.

## 2. Safety and installation requirements

### General safety information

This section contains the fundamental safety rules for the installation and operation of the board. Read thoroughly this section before starting any procedure of installation or operation of the product.

#### Injury Precautions

Review the following precautions to avoid injury and prevent damage to this product or any products connected to it. To avoid potential hazards, use the product only as specified. Only qualified personnel should perform service procedures.

**Avoid Electric Overload.**

To avoid electric shock or fire hazard, do not power a load outside of its specified range.

**Avoid Electric Shock.**

To avoid injury or loss of life, do not connect or disconnect cables while they are connected to a voltage source.

**Do Not Operate Without Covers.**

To avoid electric shock or fire hazard, do not operate this product with covers or panels removed.

**Do Not Operate in Wet/Damp Conditions.**

To avoid electric shock, do not operate this product in wet or damp conditions.

**Do Not Operate in an Explosive Atmosphere.**

To avoid injury or fire hazard, do not operate this product in an explosive atmosphere.

**Do Not Operate With Suspected Failures.**

If you suspect this product to be damaged, have it inspected by qualified service personnel.

### Safety Terms and Symbols on the Product

These terms may appear on the product:

DANGER indicates an injury hazard immediately accessible as you read the marking.

WARNING indicates an injury hazard not immediately accessible as you read the marking.

CAUTION indicates a hazard to property including the product.

The following symbols may appear on the product:



**DANGER**

High Voltage



**WARNING**

Refer to Manual

### Installation

The Mod. A7030 – AG7030 are SYx527 boards. At power ON the SYSTEM, the processor will scan all the slots in the crate to find out where the module is plugged and what kind of module it is.

## 3. Operating modes

The Mod. A7030 – AG7030 boards can be controlled, either locally or remotely, through the SYSTEM software interface. For details on SYSTEM operation, please refer to the User's Manual of this product. The following sections contain a description of commands available for the board control and status monitoring.

### Output control and monitoring

For each output channel, it is possible, through the system, to access the following parameters:

<i>CHANNEL NAME (settable):</i>	descriptive name for the relevant channel
<i>VOSET (settable):</i>	the first of the two allowed voltage programmable values.
<i>IOSET (settable):</i>	the first of the two allowed current limit programmable values (OVC warning only)
<i>V1SET (settable):</i>	the second of the two allowed voltage programmable values
<i>I1SET (settable):</i>	the second of the two allowed current limit programmable values (OVC warning only)
<i>RUp (settable):</i>	the Ramp-Up parameter value, i.e. the maximum voltage programmable increase rate.
<i>RDWn (settable):</i>	the Ramp-Down parameter value, i.e. the maximum voltage programmable decrease rate.
<i>TRIP (settable):</i>	the TRIP parameter value, i.e. the maximum time an Over Current condition is allowed to last.
<i>SVMAX (settable):</i>	the maximum voltage value programmable for the channel. If the value set as SVMAX is less than the current value of the VOSET/ V1SET parameter, the latter will automatically decrease to the SVMAX value.
<i>VMON (monitor):</i>	monitored voltage value
<i>IMON (monitor):</i>	monitored current value
<i>ImAdj</i>	offset value which is added to IMon to adjust its value to zero
<i>STATUS (monitor):</i>	it displays the channel status.
<i>PW (ON/OFF):</i>	the Power parameter shows the ON/OFF channel status. As this parameter is set ON, the channel is switched on (if the INTERLOCK is not active and if the channel is enabled either locally or remotely) highlighted in green when channel ON; onstate = ON; offstate = OFF
<i>POn (EN/DIS):</i>	Power-On option, which can be enabled or disabled. If this option is enabled, at Power-On or after a Restart each channel is restored in the same condition (defined by the Power parameter) it was before the Power-Off or Reset. If this option is disabled, at Power-On or after a Restart all the channels are off, independently from the condition in which they were before the Power-Off or Reset ; onstate = Enabled; offstate = Disabled
<i>PDwn (Kill/Ramp):</i>	Power-Down option, which can be set as KILL or RAMP. It affects the way the channels react at a Power-Off command caused by a TRIP condition. If the KILL option is selected, the relevant channel will be switched off at the maximum rate available. If the RAMP option is selected, the voltage will drop to zero at a rate determined by the value of the Ramp-Down parameter programmed for that channel; onstate = Ramp; offstate = Kill
<i>TripInt:</i>	2N-bit word (hexadecimal) maximum 16 lines, where N is the number of the board's Internal Trip Bus lines. Bits [0;N-1] allow the channel to sense the trip status from the corresponding lines when set to one; in the same way, bits [N;2N-1] allow the channel to propagate the trip status over the Trip Bus: bit N on line 0 and so on (see SY4527 User's manual).
<i>TripExt:</i>	Must be set in the 0÷255 range (hexadecimal). Bits [0;3] allow the channel to sense the trip status from the corresponding lines when set to one; in the same way, bits [4;7] allow the channel to propagate the trip status over the trip bus: bit 4 on line 0 and so on (see SY4527 User's manual).

If the POWER ON option is enabled, as the module is turned ON, the channel is restored to the same condition it was before the POWER OFF or RESET; if this option is disabled, at POWER ON or after a RESET, the channel is kept OFF independently from its previous condition.

### Channel STATUS Flag

The following messages may be returned by the SYSTEM when monitoring the channel STATUS:

RUP	channel ramping up
RDWN	channel ramping down
OVC	channel in OVERCURRENT condition
OVV	channel in OVERVOLTAGE condition
UNV	channel in UNDERVOLTAGE condition
VMAX	channel reached VMAX condition

E-TRIPPED	channel OFF due to external TRIP line signal <sup>7</sup>
I-TRIPPED	channel OFF due to internal OVERCURRENT condition
EXT_DIS	channel disabled by board INTERLOCK protection
PWR_FAIL	channel OFF due to exceeded power limit (>1.5W)

After a E-TRIPPED, I-TRIPPED, EXT\_DIS notification, it is necessary to perform a CLEAR ALARM cycle, before turning the channel ON.

Moreover it is possible to monitor board parameters, such as measured Temperature, HImax and HVMax, and to check board status; the following messages may be returned by the POWER SUPPLY SYSTEM when monitoring the board status:

UNDER_TEMP	board temperature < 5°C
OVER_TEMP	board temperature > 65°C

## Interlock protection

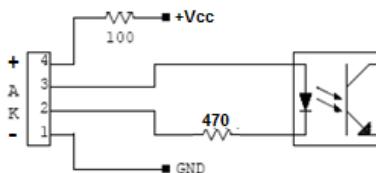


Fig. 2 – INTERLOCK electrical scheme

In order to enable the HV output channels, first of all it is necessary that SAFETY LOOP pin on the Radiall 52pin output connector is short circuited with the next RETURN pin (pin 21 on A/AG7030 – 7030T; pin 10 on A/AG7030L); if the board features SHV connectors, skip this step. Then it is necessary to configure the Interlock connector as follows:

contact open	INTERLOCK
voltage level (0÷1V, ~5mA current) between pin 2 and pin 3	INTERLOCK
short circuit pin 1 with pin 2, and pin 3 with pin 4	ENABLED
voltage level (4÷6V, ~5mA current) between pin 2 and pin 3	ENABLED

A schematic diagram of the Interlock input is shown in the figure above, where the diode is part of opto-coupler stage. *Interlock* means that channel is hardware disabled.

The front panel Interlock LED is ON when the INTERLOCK is active; as INTERLOCK is active, channels are turned off at the fastest available rate, regardless the RAMP DOWN setting.

## Grounding specifications

The Mod. A7030 channels share a common floating return (HVGND), insulated from the crate ground (DGND). This feature allows on-detector grounding, thus avoiding loops which may increase noise level. HVGND and DGND may be connected, by short circuiting J1 jumper pins on the motherboard (see figure below).



Fig. 3 – J1 jumper location

<sup>7</sup> EXTTRIP and INTTRIP parameters are expressed in Hexadecimal format


## Safety Earth connection

The connection of return to Earth is fundamental for User safety. The connection must always be at the level of detector or power supply system. Return connection even if not present or performed incorrectly, due to protection circuits implemented on the A7030 are bound to Earth; in this case the voltage difference between return and Earth (System), is limited to approximately 50V. Please note that this is a status of emergency-protection, not a working one. The Connector Configurator allows to optimize the connection of the return and of DGND (Earth). The best configuration must be determined by the user upon application, the optimal connection depends on many characteristics of the related experiment.

The following diagrams show two examples of configuration, namely:

The “closed loop” Earth configuration (J1 contacts closed)

The “open loop” Earth configuration (J1 contacts open)

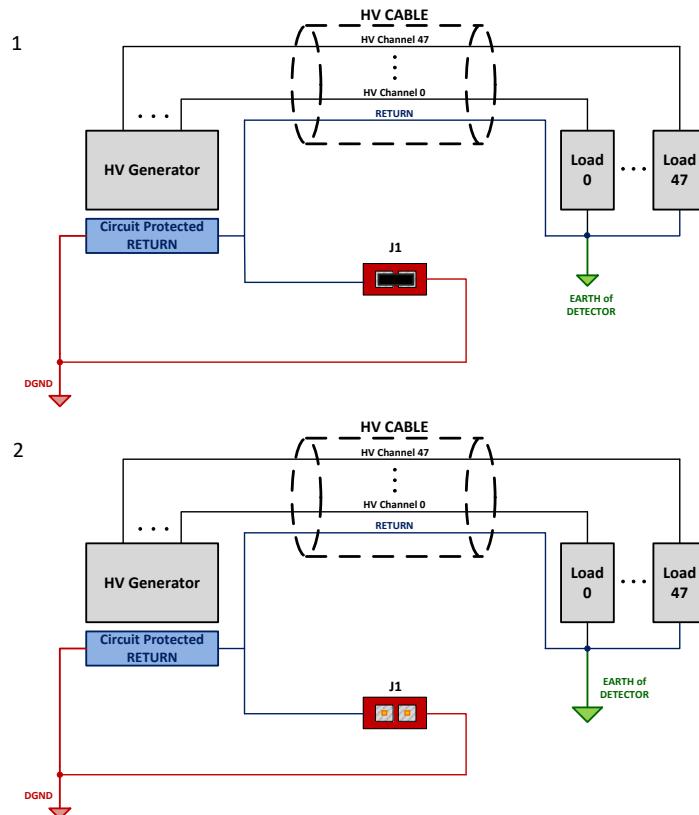

**Fig. 4 – Earth configuration connection examples**

**CAEN S.p.A.**

Via Vetraia 11  
55049 - Viareggio  
Italy  
Phone +39 0584 388 398  
Fax +39 0584 388 959  
info@caen.it  
[www.caen.it](http://www.caen.it)

**CAEN GmbH**

Brunnenweg 9  
64331 Weiterstadt  
Germany  
Tel. +49 (0)212 254 4077  
Mobile +49 (0)151 16 548 484  
info@caen-de.com  
[www.caen-de.com](http://www.caen-de.com)

**CAEN Technologies, Inc.**

1 Edgewater Street - Suite 101  
Staten Island, NY 10305  
USA  
Phone: +1 (718) 981-0401  
Fax: +1 (718) 556-9185  
info@caentechnologies.com  
[www.caentechnologies.com](http://www.caentechnologies.com)

**CAENspa INDIA Private Limited**

B205, BLDG42, B Wing,  
Azad Nagar Sangam CHS,  
Mhada Layout, Azad Nagar, Andheri (W)  
Mumbai, Mumbai City,  
Maharashtra, India, 400053  
info@caen-india.in  
[www.caen-india.in](http://www.caen-india.in)



Copyright © CAEN SpA. All rights reserved. Information in this publication supersedes all earlier versions. Specifications subject to change without notice.